



# IPCAM 611+

CAMERA WITH ARTIFICIAL INTELLIGENCE

# | Product

**Pumatronix Equipamentos Eletrônicos Ltda.**

Rua Bartolomeu Lourenço de Gusmão, 1970. Curitiba, Brazil

Copyright 2020 Pumatronix Equipamentos Eletrônicos Ltda.

*All rights reserved.*

Visit our website <https://www.pumatronix.com>

Send comments on this document to [suporte@pumatronix.com](mailto:suporte@pumatronix.com)

Information contained in this document is subject to change without prior notice.

Pumatronix reserves the right to modify or improve this material without obligation to notify the changes or improvements.

Pumatronix grants permission to download and print this document, provided that the electronic or physical copy of this document contains the full text. Any changes to this content are strictly prohibited.

## Change History

---

Date	Revision	Content updated
01/08/2025	1.0	Initial Edition

Please read this instruction carefully before operating the unit and keep it for further reference.

## Safety Instruction

The following symbols or words may be found in this manual.

Symbols/Words	Description
<b>⚠ Warning</b>	Indicates a medium or low potential hazardous situation which, if not avoided, will or could result in slight or moderate injury
<b>⚠ Caution</b>	Indicates a potential risk which, if not avoided, will or could result in camera damage, data loss, lower performance or unexpected results
<b>ℹ Note</b>	Provides additional information to emphasize or supplement important points of the text.

### About the Manual

- This manual is suitable for many models. All examples, screenshots, figures, charts, and illustrations used in the manual are for reference purpose, and actual products may be different with this Manual.
- Please read this user manual carefully to ensure that you can use the camera correctly and safely.
- Within the maximum scope permitted by the law, the products described in this Manual (including hardware, software, firmware, etc.) are provided "AS IS". The information in this document (including URL and other Internet site reference data) is subject to change without notice. This Manual may contain technical incorrect places or printing errors. This information will be periodically updated, and these changes will be added into the latest version of this Manual without prior notice.
- In this manual, the trademarks, product names, service names and company names that are not owned by our company are the properties of their respective owners.

### Use of the Product

- This product should not be used for illegal purposes.
- The company does not allow anyone to use the Company's products to infringe the privacy, personal information, and portrait rights of others. The user shall not use this product for any illegal use or any prohibited use under these terms, conditions, and declarations. When using this product, the user shall not damage, disable, overload or obstruct any of the hardware of this product in any way, or interfere with the use of this product by any other users. Also, the user should not attempt to use the product or the software, by hacking, stealing the password, or any other means.

### Electrical Safety

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12V/2 A or POE 48V/ 350mA or AC24V (varies by models), no more than 2000m altitude of operation and Tma=60 Deg.C.
- As for the modes with PoE function, the function of the ITE being investigated to IEC 60950-1 standard is considered not likely to require connection to an Ethernet network with outside plant routing, including campus environment and the ITE is to be connected only to PoE networks without routing to the outside plant.

- Improper handling and/or installation could run the risk of fire or electrical shock.
- The product must be grounded to reduce the risk of electric shock.
- ⚠ Warning: Wear anti-static gloves or discharge static electricity before removing the bubble or cover of the camera.

### Environment

- Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.
- Avoid aiming the camera directly towards extremely bright objects, such as, sun, as this may damage the image sensor.
- Keep away from heat sources such as radiators, heat registers, stove, etc.
- Do not expose the product to the direct airflow from an air conditioner.
- Do not block any ventilation openings and ensure proper ventilation around the camera.
- Do not place the camera in a damp, dusty extremely hot or cold environment, or the locations with strong electromagnetic radiation or unstable lighting.
- Make sure that no reflective surface (like shiny floors, mirrors, glass, lake surfaces and so on) is too close to the camera lens, resulting in image blur.

### Operation and Daily Maintenance

- There are no user-serviceable parts inside. Please contact the nearest service center if the product does not work properly.
- Please shut down the camera and then unplug the power cable before you begin any maintenance work.
- ⚠ Warning: All the examination and repair work should be done by qualified personnel.
- Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.
- Always use the dry soft cloth to clean the camera. If there is too much dust, use a cloth cleaning (such as using cloth) may result in poor IR/illumination LEDs functionality and/or IR/illumination LEDs reflection.
- Dome cover is an optical camera, please don't touch or wipe the cover surface directly during installation and use. For dust, use oil-free soft brush or hair dryer to remove it gently; for grease or finger print, use oil-free cotton cloth or paper soaked with detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is not clean enough.

### White Light Illuminator (if supported)

- DO NOT turn on the white light when you install or maintain the camera. Please wear appropriate eye protection when you want to test the white light.
- DO NOT stare at the operating light source. It will probably be harmful to your eyes.
- The white light illuminators and/or the IR LED's should at no time be covered when the camera is running to prevent overheating and the possible risk of fire.

## Privacy Protection

- When installing cameras in public areas, a warning notice shall be given in a reasonable and effective manner and clarify the monitoring range.
- As the camera user or data controller, you might collect the personal data of others, such as face, car plate number, etc. As a result, you shall implement reasonable and necessary measures to protect the legitimate rights and interests of other people, avoiding data leakage, improper use, including but not limited to, setting up access control, providing clear and visible

notice to inform people of the existence of the surveillance area, providing required contact information and so on.

## Disclaimer

---

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, Our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations.

## Cybersecurity Recommendations

---

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Regularly change the passwords of your camera to ensure that only authorized users can access the system (recommended time is 90 days).
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the camera to the public network. When it is necessary to be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.
- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of WEB client access, please create a TLS certificate to enable HTTPS.
- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.
- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your camera has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

## Regulatory Information

---

### FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## 1. FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital camera, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 2. FCC conditions:

- This camera complies with part 15 of the FCC Rules. Operation of this product is subject the following two conditions:
- This camera may not cause harmful interface.
- This camera must accept any interference received, including interference that may cause undesired operation.

## RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

# Summary

1.	Network Connection .....	9
1.1.	LAN .....	9
1.1.1.	Access through IP-Tool .....	9
1.1.2.	Directly Access via Web Browser .....	12
1.2.	WAN .....	14
2.	Live View .....	16
3.	Network Camera Configuration .....	19
3.1.	System Configuration .....	19
3.1.1.	Basic Information .....	19
3.1.2.	Date and Time .....	19
3.1.3.	Local Config .....	20
3.1.4.	Storage .....	21
3.1.5.	Serial Port .....	24
3.2.	Image Configuration .....	25
3.2.1.	Display Configuration .....	25
3.2.2.	Video / Audio Configuration .....	27
3.2.3.	OSD Configuration .....	29
3.2.4.	Video Mask .....	30
3.2.5.	ROI Configuration .....	31
3.2.6.	Lens Control .....	32
3.2.7.	Smart Supplement Light Configuration .....	32
3.3.	Alarm Configuration .....	33
3.3.1.	Motion Detection .....	33
3.3.2.	Exception Alarm .....	36
3.3.3.	Alarm In .....	38
3.3.4.	Alarm Out .....	39
3.3.5.	Alarm Server .....	40
3.3.6.	Audio Alarm .....	41
3.3.7.	Light Alarm .....	42
3.3.8.	Video Exception .....	43

3.3.9.	Audio Exception .....	44
3.3.10.	Disarming .....	45
3.4.	Event Configuration .....	46
3.4.1.	Object Abandoned/Missing .....	47
3.4.2.	Line Crossing .....	48
3.4.3.	Region Intrusion .....	54
3.4.4.	Region Entrance .....	56
3.4.5.	Region Exiting .....	56
3.4.6.	Target Counting by Line .....	57
3.4.7.	Target Counting by Area .....	60
3.4.8.	Heat Map .....	63
3.4.9.	Loitering Detection .....	64
3.4.10.	Illegal Parking Detection .....	66
3.4.11.	Video Metadata .....	68
3.4.12.	Face Detection .....	71
3.5.	Network Configuration .....	74
3.5.1.	TCP/IP .....	74
3.5.2.	Port .....	75
3.5.3.	Server Configuration .....	76
3.5.4.	Onvif .....	76
3.5.5.	DDNS .....	77
3.5.6.	SNMP .....	78
3.5.7.	802.1x .....	80
3.5.8.	RTSP .....	80
3.5.9.	RTMP .....	81
3.5.10.	UPNP .....	82
3.5.11.	Email .....	82
3.5.12.	FTP .....	83
3.5.13.	HTTP POST .....	85
3.5.14.	HTTPS .....	86
3.5.15.	P2P .....	87
3.5.16.	QoS .....	88
3.5.17.	Cloud Upgrade .....	88



3.6.	Security Configuration .....	88
3.6.1.	User Configuration .....	88
3.6.2.	Online User .....	90
3.6.3.	Block and Allow Lists.....	91
3.6.4.	Security Management.....	91
3.7.	Maintenance Configuration.....	92
3.7.1.	Backup and Restore .....	92
3.7.2.	Reboot .....	93
3.7.3.	Upgrade .....	94
3.7.4.	Operation Log.....	94
3.7.5.	Debug Mode.....	94
3.7.6.	Maintenance Information.....	95
4.	Search .....	95
4.1.	Image Search .....	95
4.2.	Video Search .....	96
5.	Appendix.....	98
5.1.	Appendix 1 Troubleshooting.....	98
6.	General Warranty Conditions.....	100
6.1.	Situations in which the Product loses its Warranty.....	100
7.	Privacy Policy.....	101

# 1. Network Connection

## System Requirement

For proper operating the product, the following requirements are suggested for your computer.

**Operating System:** Windows 10 professional version or higher

**CPU:** i7-117000 2.5GHz or higher

**GPU:** AMD770+intel UHD Graphics 750

**RAM:** 8G or higher

**Display:** 1920\*1080 resolution or higher

**Web browser:** Chrome89.0+/Edge89.0+/Firefox87.0+/Safari 14.0+

It is recommended to use the latest version of these web browsers.

The menu display and operation of the camera may be slightly different by using the browser with plug-in or without plug-in. Installing plug-in will display more functions of the camera.


Connect IP camera via LAN or WAN. Here only take plug-in required browser for example. The details are as follows:

## 1.1. LAN


In LAN, there are two ways to access IP camera: 1. access through IP-Tool; 2. directly access via web browser.

### 1.1.1. Access through IP-Tool

Network connection:

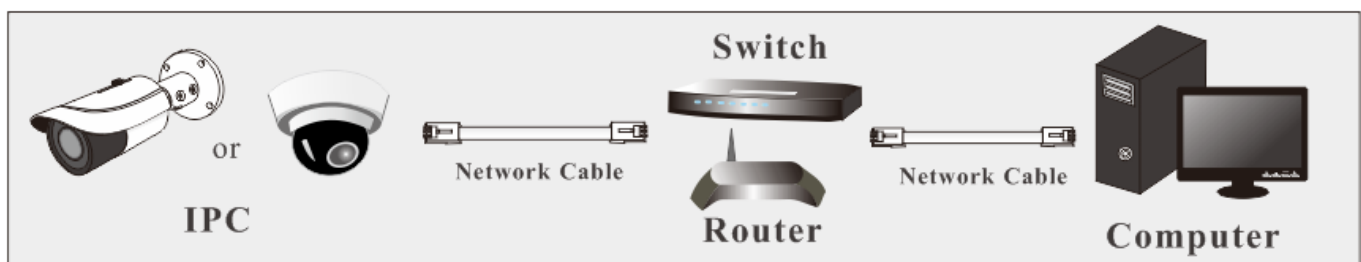

- 1) Make sure the PC and IP camera are connected to the LAN and the IP-Tool is installed in the PC.
- 2) Double click the IP-Tool icon on the desktop to run this software as shown below:

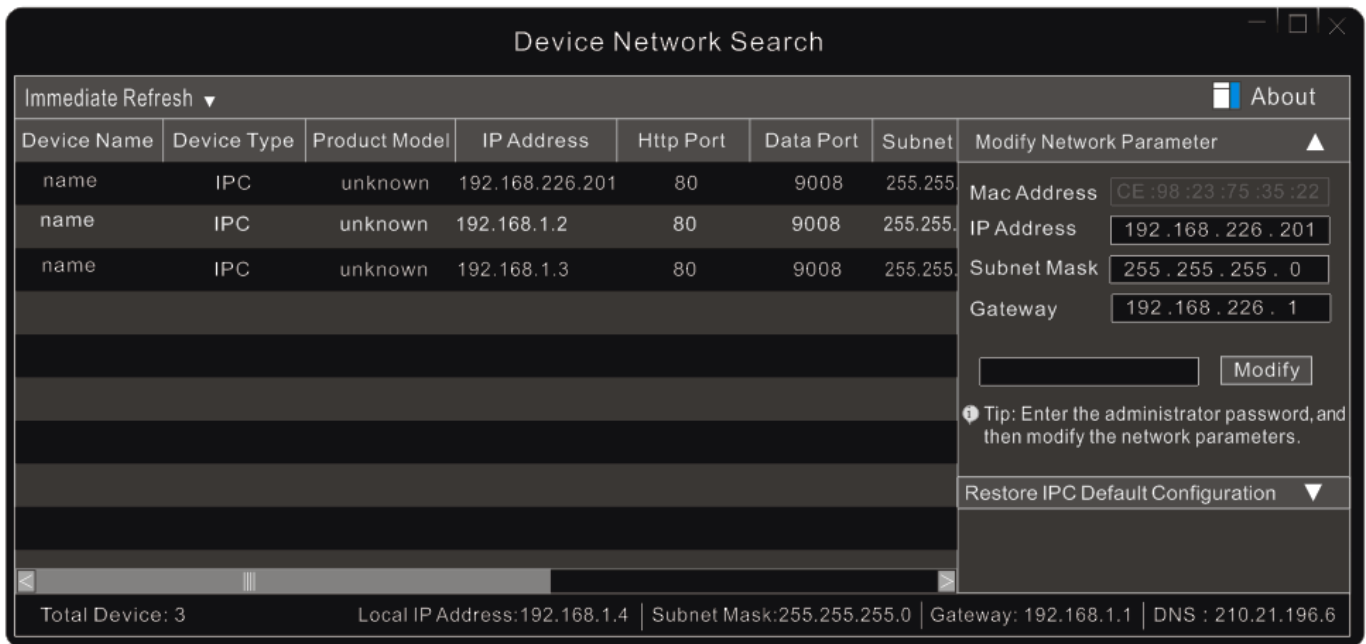

The default IP address of the camera is ***192.168.226.201***.

- 3) Double click the IP address and then the system will open a web browser to connect the camera. After you read the privacy statement, check and click "Already Read". This will bring you to a configuration wizard interface.
  - a. Select the location (eg. Britain). Then click [Next].
  - b. Set the zone, video format (frequency), date and time format.

**Config**

Frequency	<input type="text" value="60HZ"/>
Zone	<input type="text" value="GMT-05 (New York, Torc"/>
Date Format	<input type="text" value="MM-DD-YYYY"/>
Time Format	<input type="text" value="12-Hour"/>

- c. Set security questions and answers as needed. After setting the questions and answers, click [Next] to continue. It is very important for you to reset your password. Please remember these answers.
- d. Activate the camera.

**Device Activation**

User Name

Activate Onvif User

New Password

8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.

Confirm Password

The default username is "admin". Please self-define the password of admin according to the tip.

**Note:** It is highly recommended to use the strong password for your account security. If you want to change your password level, you can go to **Config→Security Management →Password Security** interface to change the level and then modify the admin password (Go to **Config→User**).

By default, the ONVIF password will match the admin password that you set. Should you wish to change the ONVIF password to a different password than your admin password, go to the ONVIF section to change the password (**Config→Network→ Onvif**)

When you connect the camera through the ONVIF protocol in the third-party platform, you can use the username and the password set to connect.

- e. Set the application scenarios. Face event or smart event is optional.
- f. Click "Save" to save the settings.

Having set all above-mentioned items, the system will reboot. Read the privacy statement, check and click "Already Read". Then the login interface will appear as shown below.

If it is the first time for you to log in, follow directions to download, install and run the Active X control if prompted.

Name:

Password:

Stream Type:

Language:

[Forgot Password?](#)

Please enter the user name (admin) and password. Then select the stream type and language as needed.

Stream Type: The plug-in free live view only supports 1080P or lower resolution.

If you forget the admin password, you can reset the password by clicking **Forget Password** on the login page. Then you can reset the password by the security questions and answers you set. You can set the

account security question during the activation, or you can go to **Config→Security→User**, click **Safety Question**, select the security questions and input your answers.

### 1.1.2. Directly Access via Web Browser

The default network settings are as shown below:

IP address: **192.168.226.201**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.226.1**


HTTP: **80**

Data port: **9008**


Use the above default settings when logging in the camera for the first time. Directly connect the camera to the computer through network cable.

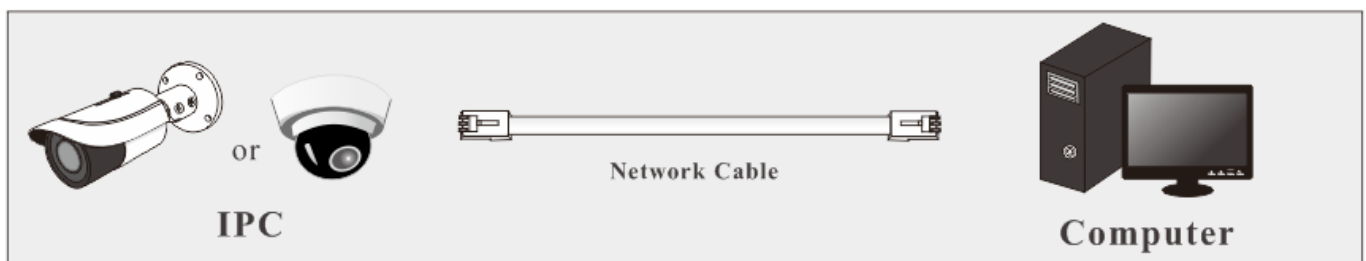

- 1) Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click "Local Area Connection" to pop up the following window.

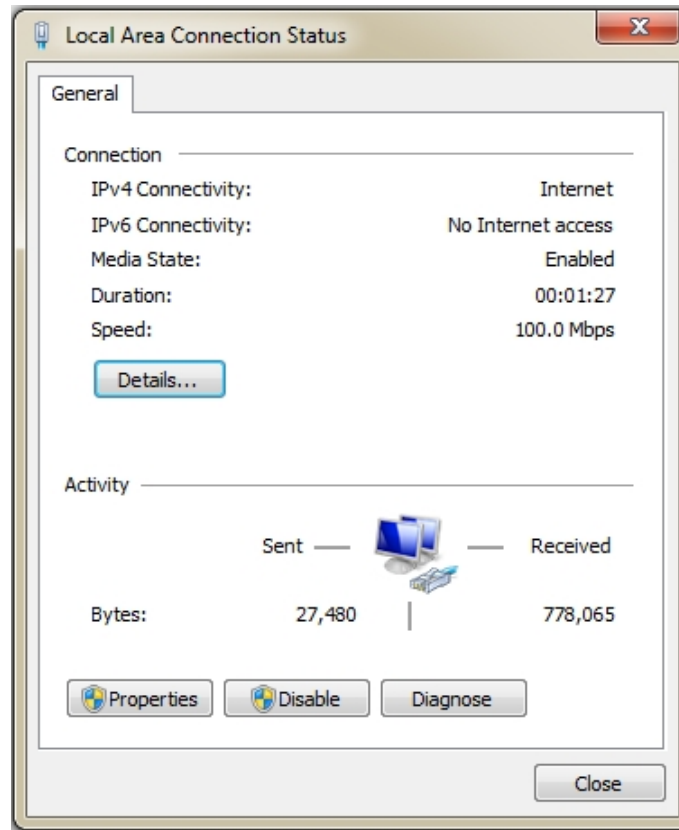

Select "Properties" and then select internet protocol according to the actual situation (for example: IPv4). Next, click the "Properties" button to set the network of the PC.

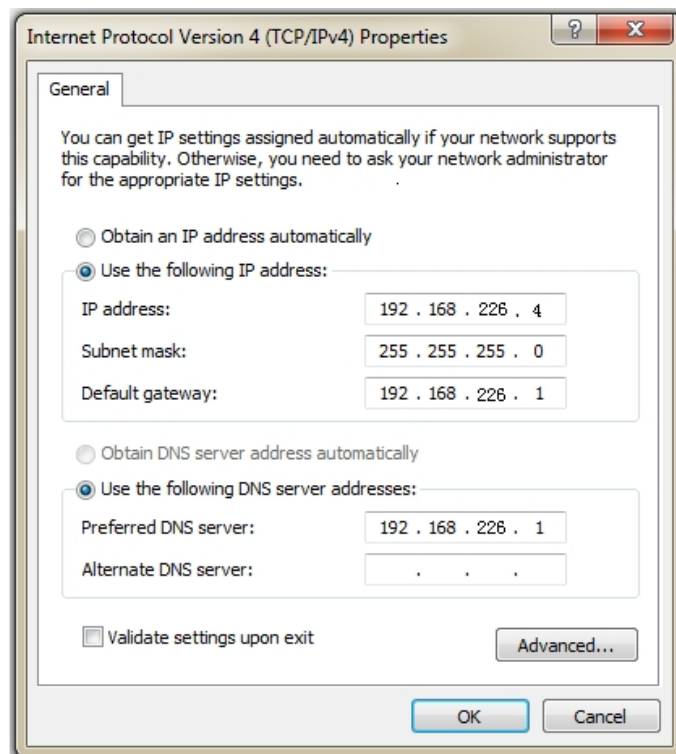

- 2) Open a web browser and enter the default address of IP camera and confirm.
- 3) Follow directions to download and install the Active X control.
- 4) Enter the default username and password in the login window and then enter to view.


## 1.2. WAN

- Access via P2P

Connect and activate the camera according to the above-mentioned steps (See 1.1.1). Enable P2P (click **Config**→**Network**→**P2P**) and then enter [www.autonat.com](http://www.autonat.com) to visit the web client remotely.

**Note:** Different regions may have different login addresses. Please contact your dealer for details.

- Access through the router or virtual server

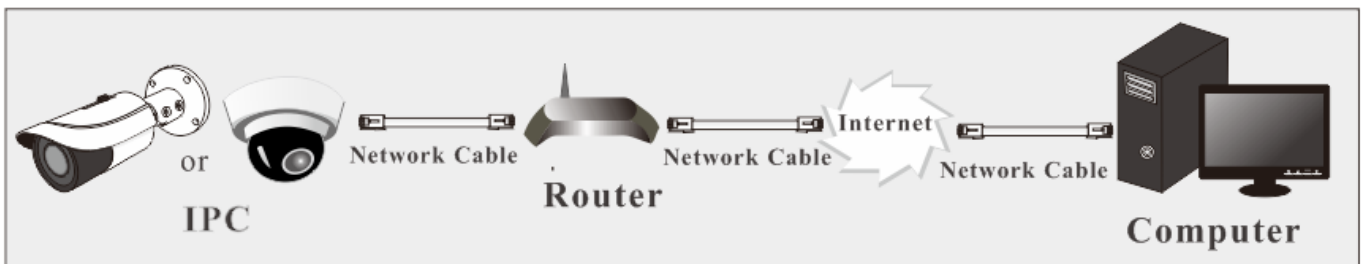

- 1) Make sure the camera is connected to the local network and then log in the camera via LAN and go to **Config**→**Network**→**Port** menu to set the port number.

HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
Data Port	<input type="text" value="9008"/>
RTSP Port	<input type="text" value="554"/>

*Port Setup*

- 2) Go to **Config** →**Network**→**TCP/IP** menu to modify the IP address.

<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6 <input type="radio"/> PPPoE Config <input type="radio"/> IP Change Notification Config	
<input type="radio"/> Obtain an IP address automatically	
<input checked="" type="radio"/> Use the following IP address	
IP Address	<input type="text" value="192.168.226.201"/> <input type="button" value="Test"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.226.1"/>
Preferred DNS Server	<input type="text" value="210.21.196.6"/>
Alternate DNS Server	<input type="text" value="8.8.8.8"/>

*IP Setup*

- 3) Go to the router's management interface through your web browser to forward the IP address and port of the camera in the "Virtual Server".


Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9007	to 9008	Both	192.168.1.201	<input checked="" type="checkbox"/>
2	80	to 81	Both	192.168.1.201	<input checked="" type="checkbox"/>
3	10000	to 10001	Both	192.168.1.166	<input type="checkbox"/>
4	21000	to 21001	Both	192.168.1.166	<input type="checkbox"/>

#### Router Setup

- Open a web browser and enter its WAN IP and http port to access. (for example, if the http port is changed to 81, please enter "192.198.1.201:81" in the address bar of web browser to access).

- Access through PPPoE dial-up

#### Network connection

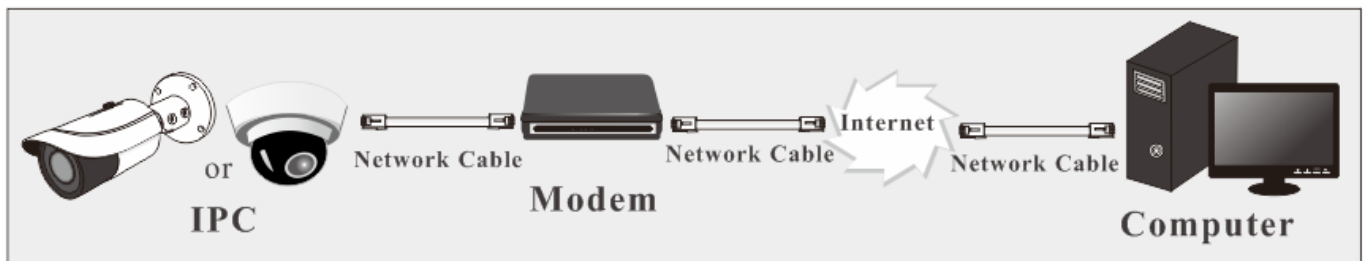

Access the camera through PPPoE auto dial-up. The setup steps are as follow:

- Go to **Config**→**Network**→**Port** menu to set the port number.
- Go to **Config** →**Network**→**TCP/IP**→**PPPoE** Config menu. Enable PPPoE and then enter the user name and password from your internet service provider.


IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input checked="" type="checkbox"/> Enable			
User Name	<input type="text" value="xxxxxxx"/>		
Password	<input type="password" value="•••••"/>		
<input type="button" value="Save"/>			

- Go to **Config**→**Network**→**DDNS** menu. Before configuring the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.
- Open a web browser and enter the domain name and http port to access.



- Access through static IP

Network connection

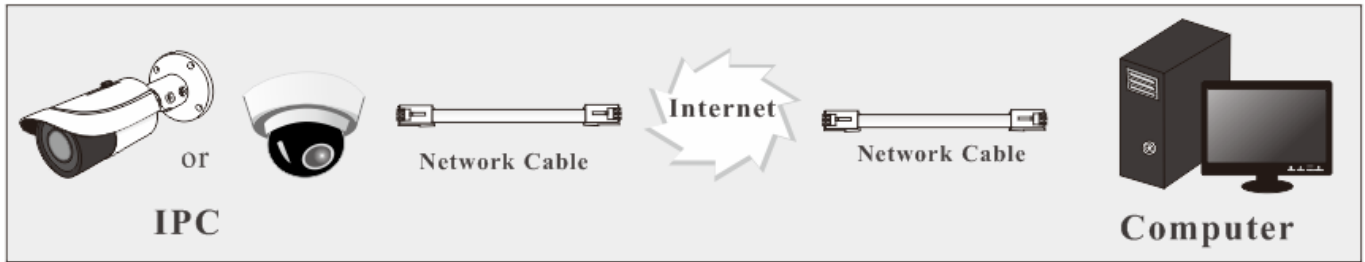


The setup steps are as follow:





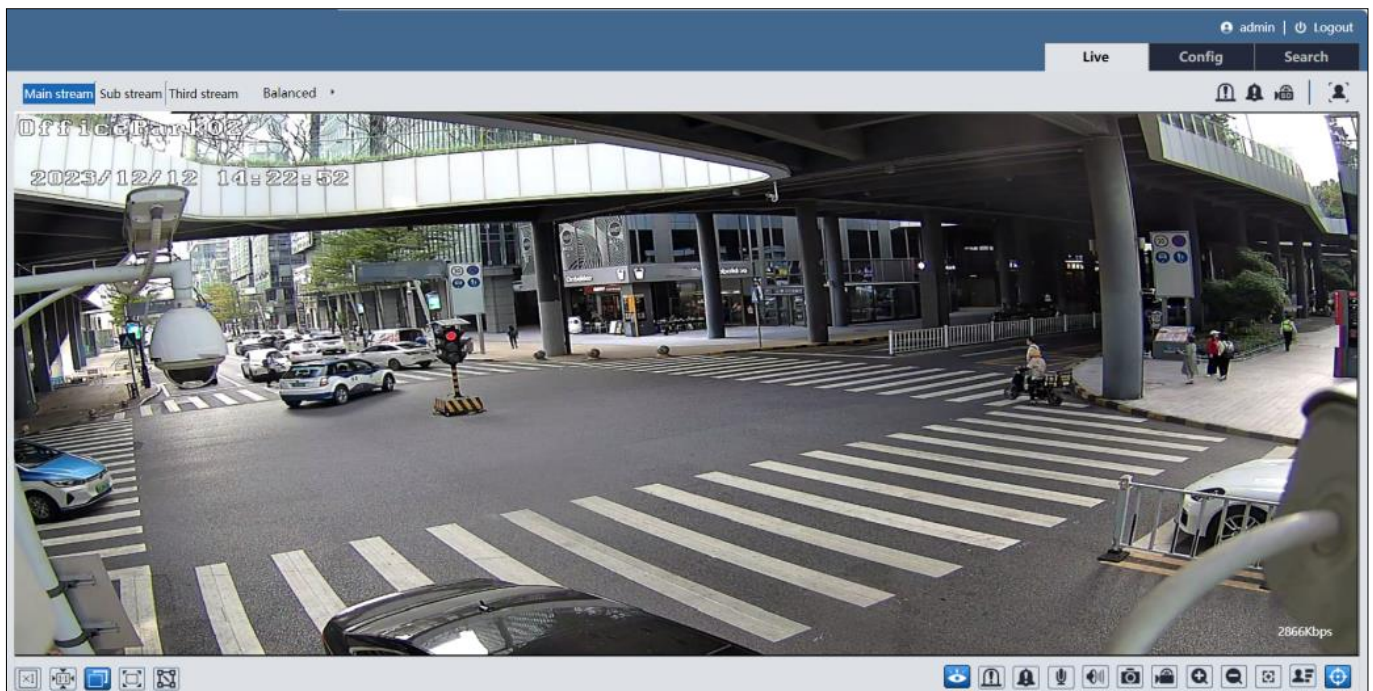


 











 















 


- 1) Go to **Config**→**Network**→**Port** menu to set the port number.
- 2) Go to **Config**→**Network**→**TCP/IP** menu to set the IP address. Check "Use the following IP address" and then enter the static IP address and other parameters.
- 3) Open a web browser and enter its WAN IP and http port to access.


## 2. Live View

After logging in, the following window will be shown. The live view interface of different cameras may be slightly different. The following pictures and descriptions are for reference only.








The following table is the instructions of the icons on the live view interface.

Icon	Description	Icon	Description
	Original size		Sensor alarm indicator
	Fit correct scale		Motion alarm indicator
	Auto (fill the window)		Color abnormal indicator
	Full screen		Abnormal clarity indicator
	Measure Tool		Scene change indicator
	Start/stop live view		Audio exception indicator
	Enable/disable alarm output		Alarm output indicator
	Enable or disable audio alarm (only some models support this function)		Audio alarm indicator
	Enable/disable light alarm(only some models support this function)		Light alarm indicator
	Start/stop two-way audio (only available for the model with audio input connector)		Line crossing indicator
	Enable/disable audio		Intrusion indicator
	Snapshot		Region entrance indicator
	Start/stop local recording		Region exiting indicator
	Zoom in		Face detection indicator
	Zoom out		Target counting (by line) indicator
	AZ control (only available for the model with motorized zoom lens )		Target counting (by area) indicator
	Face capture (when face event is selected)		Object detection indicator (object abandoned/missing)
	Video metadata (when smart event is selected)		Heat map indicator
	Rule information display		Loitering detection indicator
	PTZ control (only some models support)		Illegal parking detection indicator
	SD card recording indicator		Video metadata indicator

- Measure Tool: get the height and width pixel of the selected region in the live view interface. (This function is only available for main stream under smart event scenarios). Click  and drag the mouse on the image to draw a desired box. The width and height pixel will directly display in the box.
- Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.























- After clicking the audio alarm icon, the sound warning will be triggered according to the set warning times (you can set the warning times by clicking **Config→Alarm→Audio Alarm**). Click this icon again. After the current warning voice completely sounds, it will stop. (Only some cameras support this function)
- After clicking the light alarm icon, the red-blue light will flash alternatively according to the set flashing time (you can set the flashing time by clicking **Config→Alarm→Light Alarm**). Click this icon again to stop flashing. (Only some cameras support this function)
- Plug-in free live view: PTZ control, two-way audio and local recording are not supported and the preview mode switch (real-time/balanced/fluent mode) is not available too.
- In full screen mode, double click on the mouse to exit or press the ESC key on the keyboard.
- Click AZ control button to show AZ control panel. The descriptions of the control panel are as follows:




Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

To set the stream profile, select Main stream, Sub stream, Third stream, Fourth/Fifth stream (if supported). Go to **Configure→Video/Audio** to set the resolution for each stream as needed.

Some cameras can be connected with a compatible external PTZ camera through RS485 (Go to **Configure→Serial Port** to set). Click the PTZ icon to reveal the PTZ control panel.

The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Move upper left direction		Move upper right direction
	Move up		Stop movement
	Move left		Move right
	Move lower left direction		Move lower right direction
	Move down		Speed adjustment
	Zoom out		Zoom in
	Focus -		Focus +
	Iris -		Iris +
	Auto scan		Wiper
	Light		Radom scan
	Group scan		Preset

Select preset and click  to call the preset. Select and set the preset and then click  to save the position of the preset. Select the set preset and click  to delete it

## Descriptions of Rule Information



Color Descriptions of Target Recognition box:

- Green box: detect human
- Purple box: detect motor vehicle
- Light blue box: detect non-motor vehicle (motorcycle/bicycle)
- Target box after an event is triggered: turn yellow

Rule line or area color display:

- Rule line or area: blue
- Rule line or area after an event is triggered: turn from blue to red

## 3. Network Camera Configuration

In the Webcam client, choose "Config" to go to the configuration interface.

**Note:** Wherever applicable, click the "Save" button to save the settings.

### 3.1. System Configuration

#### 3.1.1. Basic Information

In the "Basic Information" interface, the system information of the camera is listed, such as camera name, product model, firmware version, camera ID, QR code, etc.

After enabling the P2P function (**Config**→**Network**→**P2P**), you can use the mobile APP to scan this QRcode to quickly add this camera.

#### 3.1.2. Date and Time

Go to **Config**→**System**→**Date and Time**. Please refer to the following interface.

Date and Time		Summer Time	
Zone:	GMT (Dublin, Lisbon, London, Reykjavik) <input type="text"/>		
Time Mode:			
<input checked="" type="radio"/> Synchronize with NTP server			
NTP server:	time.windows.com <input type="text"/>	Update period:	1440 <input type="text"/> Minutes
<input type="radio"/> Set manually			
Set Time:	2022-10-13 02:22:10 <input type="text"/>		
<input type="checkbox"/> Sync with computer local time			
<input type="button" value="Save"/>			

Select the time zone and time mode as needed.

**Note:** The time zone of the camera and the computer must be the same. It is recommended to modify the time zone of the camera according to the time zone of the computer. If the time zone of the computer is modified, the current web client needs to be closed. Then re-open it and log in again.

#### Time Mode:

- NTP: Specify an NTP server to synchronize the time.
- Manual: Set the system time manually or you can synchronize the time with the time of the local computer.

Click the "Summer Time" tab to set DST (Daylight Saving Time) as needed.

<input checked="" type="checkbox"/> DST					
<input checked="" type="radio"/> Auto DST					
<input type="radio"/> Manual DST					
Start Time	Januar <input type="text"/>	First <input type="text"/>	Sunda <input type="text"/>	00 <input type="text"/>	Hour
End Time	Februa <input type="text"/>	First <input type="text"/>	Mond <input type="text"/>	00 <input type="text"/>	Hour
Time Offset	120 Minutes <input type="text"/>				
<input type="button" value="Save"/>					

### 3.1.3. Local Config

Go to **Config**→**System**→**Local** Config to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable audio in the recorded files.

Picture Path	C:\Program Files\NetIPCamera\Picture <input type="text"/>	<input type="button" value="Browse"/>
Record Path	C:\Program Files\NetIPCamera\Record <input type="text"/>	<input type="button" value="Browse"/>
Video Audio Settings	<input type="radio"/> Open <input checked="" type="radio"/> Close	
Show Bitrate	<input type="radio"/> Open <input checked="" type="radio"/> Close	
Local Smart Snapshot Storage	<input type="radio"/> Open <input checked="" type="radio"/> Close	
<input type="button" value="Save"/>		

Show Bitrate: enable or disable bitrate display on the live video.

Additionally, "Local smart snapshot storage" can be enabled or disabled here. If enabled, the captured pictures triggered by smart events will be saved to the local PC.

**Note:** when you access your camera by the web browser without the plug-in, only Show Bitrate can be set in the above interface.

### 3.1.4. Storage

Go to **Config→System→Storage** to go to the interface as shown below.

Management	Record	Snapshot	FTP Snapshot
Total picture capacity	<input type="text" value="6088 MB"/>		
Picture remaining space	<input type="text" value="5955 MB"/>		
Total recording capacity	<input type="text" value="54720 MB"/>		
Record remaining space	<input type="text" value="54720 MB"/>		
State	<input type="text" value="Normal"/>		
Snapshot Quota	<input type="text" value="10"/> %		
Video Quota	<input type="text" value="90"/> %		
Changes in the quota ratio need to be formatted before they become effective.			
<input type="button" value="Eject"/> <input type="button" value="Format"/>			

- **SD Card Management**

Click the "Format" button to format the SD card. All data will be cleared by clicking this button.

Click the "Eject" button to stop writing data to SD card. Then the SD card can be ejected safely.

**Note:** After formatting the SD Card, 128-bit encryption will be included (AES-128).

**Snapshot Quota:** Set the capacity proportion of captured pictures on the SD card.

**Video Quota:** Set the capacity proportion of record files on the SD card.

**Note:** This series of products support ANR (Automatic Network Replenishment) function.

- 1) When the network of the camera is disconnected (for example, the network cable is unplugged), the camera will automatically trigger record and store the recorded files to the SD card.
- 2) After the IPC is added to the NVR supporting ANR function and the ANR function of the IPC is enabled in the NVR, the IPC will automatically trigger record and store the recorded files to the SD card when the network between the NVR and the IPC is disconnected. After resuming connection, the IPC will automatically upload the recorded files during the offline period to the NVR.

- **Schedule Recording Settings**

- 1) Go to **Config→System→Storage→Record** to go to the interface as shown below.

Management	Record	Snapshot	FTP Snapshot
<b>Record Parameters</b>			
Record Stream	<input type="text" value="Main stream"/>		
Pre Record Time	<input type="text" value="No Pre Record"/> (H264,H265,MJPEG)		
Cycle Write	<input type="text" value="Yes"/>		
<b>Timing</b>			
<input checked="" type="checkbox"/> Enable Schedule Record			

- 2) Set record stream, pre-record time, cycle writing.

**Pre Record Time:** Set the time to record before the actual recording begins.

**Overwrite (Cycle Write):** the earliest record data will be replaced by the latest when the disks are full.

3) Set schedule recording. Check "Enable Schedule Record" and set the schedule.

Erase  Add
Manual Input Select All Invert Clear

**Week Schedule**

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Mon.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Tue.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Wed.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Thu.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Fri.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										
Sat.	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										

**Holiday Schedule**

Date(MM-DD) 
+

-

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
	00:00-24:00																								
											Apply settings to	Manual Input	Select All	Invert	Clear										

### Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

- "Add": Add the schedule for a special day. Drag the mouse to set the time on the timeline.
- "Erase": Delete the schedule. Drag the mouse to erase the time on the timeline.
- Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

### Day schedule

Set the alarm time for alarm a special day, such as a holiday.

**Note:** Holiday schedule takes priority over weekly schedule.





- **Snapshot Settings**

Go to **Config→System→Storage→Snapshot** to go to the interface as shown below.

Management	Record	Snapshot	FTP Snapshot
<b>Snapshot Parameters</b>			
Image Format	JPEG <input type="button" value="v"/>		
Resolution	1280x720 <input type="button" value="v"/>		
<b>Event Trigger</b>			
Snapshot Interval	1 <input type="text"/>	Second	
Snapshot Quantity	5 <input type="text"/>		
<b>Timing</b>			
<input type="checkbox"/> Enable Timing Snapshot			
Snapshot Interval	5 <input type="text"/>	Second	

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

**Snapshot Quantity:** The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.

**Timing Snapshot:** Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See Schedule Recording).

- **FTP Snapshot**

If enabled, the system will upload snapshots to the FTP server according to the time interval.

Management	Record	Snapshot	FTP Snapshot
<input checked="" type="checkbox"/> Enable Timing Snapshot			
Server Address	<input type="text" value="n(10,***,***,101)"/> <input type="button" value="v"/>		
Snapshot Interval	60 <input type="text"/>	Second	
<input type="button" value="Save"/>			

**Server Address:** select the set FTP server. See FTP section for the FTP server setting.

### 3.1.5. Serial Port

**Only some models support this function.**

This function can be used with a compatible external PTZ camera through RS485 interface. The Baud-Rate, protocol and address must be the same as the PTZ camera's.

In addition, you can use RS485 to transmit the data between the camera and the computer or terminal. Before using this function, please connect the camera and computer or terminal with RS485 cable. Please set the parameters of RS485 as needed. Note that you should keep the parameters of the camera and the computer or terminal all the same.


## 3.2. Image Configuration

### 3.2.1. Display Configuration

Go to **Image→Display Settings** interface as shown below. The image's brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

**Note:** the camera parameters of different cameras may be slightly different. The following pictures and descriptions are for reference only. The real camera interface shall prevail.

Camera Parameters
Profile Management



Config File Common

Brightness	<input type="range"/>	50
Contrast	<input type="range"/>	50
Hue	<input type="range"/>	50
Saturation	<input type="range"/>	50
Sharpness	<input type="checkbox"/> <input type="range"/>	128
Noise Reduction	<input type="checkbox"/> <input type="range"/>	128
Defog	<input type="checkbox"/> <input type="range"/>	128
Auto Iris	<input checked="" type="checkbox"/> (disable without auto iris lens)	
BLC	<span style="border: 1px solid gray; padding: 2px;">Off</span>	
Antiflicker	<span style="border: 1px solid gray; padding: 2px;">Off</span>	
Smart IR	<span style="border: 1px solid gray; padding: 2px;">Off</span>	
White Balance	<span style="border: 1px solid gray; padding: 2px;">Auto</span>	
Day/Night Mode	<span style="border: 1px solid gray; padding: 2px;">Auto</span>	
Sensitivity	<span style="border: 1px solid gray; padding: 2px;">Mid</span>	
Delay Time(Second)	<input type="range"/>	2
Shutter	<span style="border: 1px solid gray; padding: 2px;">1/25</span>	
Gain	<input type="range"/>	50

Default
Revoke

Video Adjustment

Lens Distortion Correction	<input type="checkbox"/> <input type="range"/>	80
Electronic Image Stabilization	<span style="border: 1px solid gray; padding: 2px;">Off</span>	
Frequency	<span style="border: 1px solid gray; padding: 2px;">50HZ</span>	
Infrared Mode	<span style="border: 1px solid gray; padding: 2px;">Auto</span>	
Corridor Pattern	<span style="border: 1px solid gray; padding: 2px;">0</span>	
Image Mirror	<input type="radio"/> Open <input checked="" type="radio"/> Close	
Image Flip	<input type="radio"/> Open <input checked="" type="radio"/> Close	

- **Brightness:** Set the brightness level of the camera's image.
- **Contrast:** Set the color difference between the brightest and darkest parts.
- **Hue:** Set the total color degree of the image.
- **Saturation:** Set the degree of color purity. The purer the color, the brighter the image is.
- **Sharpness:** Set the resolution level of the image plane and the sharpness level of the image edge.

- **Noise Reduction:** Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.
- **Defog:** Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy or rainy environment to get clear images.
- **Auto Iris:** If your camera is auto Iris, please enable it.
- **Backlight Compensation (BLC):**
  - Off: disables the backlight compensation function. It is the default mode.
  - HWDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area.
  - Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.
  - HLC: lowers the brightness of the entire image by suppressing the brightness of the image's bright area and reducing the size of the halo area.
  - BLC: If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.
- Antiflicker:
  - Off: disables the anti-flicker function. This is used mostly in outdoor installations.
  - 50Hz: reduces flicker in 50Hz lighting conditions.
  - 60Hz: reduces flicker in 60Hz lighting conditions.
- **Smart IR:** Choose "ON" or "OFF". This function can effectively avoid image overexposure so as to make the image more realistic. The higher the level is, the more overexposure compensation will be given.
- **White Balance:** Adjust the color temperature according to the environment automatically.
- **Day/Night Mode:** Choose "Auto", "Day", "Night" or "Timing". If "Timing" is selected, you need to set daytime and night time. For example: if "Daytime" is set to "7:00", the camera will switch to Day mode at 7:00 o'clock; if "Night time" is set to "17:00", the camera will switch from Day mode to Night mode at 17:00 o'clock.
- **Shutter:** Set the upper limit of the effective exposure time. The exposure time will be automatically adjusted (within the set shutter limit value) according to the actual situation.
- **Gain:** Set the upper limit of the gain. The gain value will be automatically adjusted (within the set gain limit value) according to the actual situation.
- **Lens Distortion Correction:** When the image appears distortion to some extent, please enable this function and adjust the level according to the actual scene to correct the distortion.
- **EIS:** Electronic image stabilization; increase the stability of video image by using jitter compensation technology. (Only some models support this function)
- **Frequency:** 50Hz and 60Hz can be optional.
- **Infrared Mode:** Choose "Auto", "ON" or "OFF".
- **Corridor Pattern:** Corridor viewing modes can be used for situations such as long hallways. 0, 90, 180 and 270 are available. The default value is 0.
- **Image Mirror:** Turn the current video image horizontally.
- **Image Flip:** Turn the current video image vertically.

**Note:** For some items (like frequency), if selected/enabled, the camera will reboot automatically. After that, clicking "Default" button will not take effect.

\* For dual-light models, you can set the illumination mode.

- **Illumination Mode:** choose "White light", "Infrared light" or "Smart supplement light" as needed.
- **Smart supplement light:** If selected, in low ambient light, the system will automatically turn on the visible infrared light. Once there are people/vehicles appearing in the detection area, it will automatically switch to full-brightness visible white light. When people/vehicles leaving the

detection area exceeds the set duration, it will resume to infrared light. See [Smart Supplement Light Configuration](#) for details.

If "White light" is selected, overexposure control and white light mode can be set.


- **White light mode:** Choose "Off", "Auto" or "Manual". Please select it as needed.
- **Overexposure control:** Choose "OFF", "Low", "Mid" or "High". This function can automatically adjust the exposure parameter according to the actual effect of the image, effectively avoiding detail missing caused by image overexposure, so that the image will be more vivid. Please set it as needed.

If "Infrared light" is selected, "Smart IR", "Day/Night Mode" and "Infra-red Mode" can be configured.

- **Smart IR:** Choose "ON" or "OFF". This function can effectively avoid image overexposure so as to make the image more realistic. The higher the level is, the more overexposure compensation will be given.
- **Day/Night Mode:** Choose "Auto", "Day", "Night" or "Timing".

Schedule Settings of Image Parameters:

Click the "Profile Management" tab as shown below.

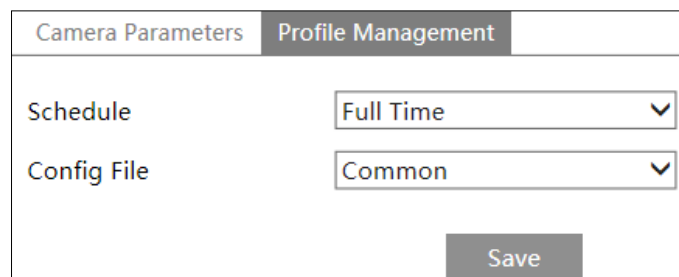


The screenshot shows the 'Profile Management' tab selected. Under the 'Schedule' field, a dropdown menu is set to 'Full Time'. Under the 'Config File' field, a dropdown menu is set to 'Common'. A 'Save' button is located at the bottom right of the form.

Set full time schedule for common, auto mode and specified time schedule for day and night.

Auto mode: in the daytime, it will automatically perform the day config file set above; at night, it will automatically perform the night config file set above.

Choose "Timing" in the drop-down box of schedule as shown below.

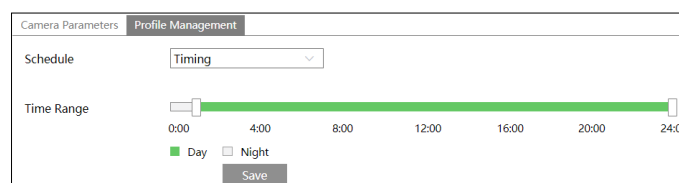

The screenshot shows the 'Profile Management' tab with 'Timing' selected in the 'Schedule' dropdown. Below it is a 'Time Range' slider from 0:00 to 24:00. A green bar indicates the 'Day' period from approximately 0:00 to 18:00, and a white bar indicates the 'Night' period from 18:00 to 24:00. A 'Save' button is at the bottom.

Drag "■" icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

### 3.2.2. Video / Audio Configuration

Go to **Image→Video / Audio** interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

**Note:** the video stream parameters of different camera series may be different. The following pictures and descriptions are for reference only. The real camera interface shall prevail.

Video		Audio							
Index	Stream Name	Resolution	Frame Rate	Bitrate Type	Bitrate(Kbps)	Video Quality	I Frame Interval	Video Compression	Profile
1	Main stream	920x1080	25	VBR	1536	Medium	100	H265	Main Profil
2	Sub stream	1280x720	25	VBR	1024	Higher	50	H265	Main Profil
3	Third stream	704x576	25	CBR	512	Medium	50	H265	Main Profil

Send Snapshot  Size:(1280x720)

Video encode slice split

Watermark(Only support H264, H265)      Watermark content:

**Save**

Multiple video streams can be adjustable.

- **Resolution:** The size of image.
- **Frame rate:** The higher the frame rate, the video is smoother.
- **Bitrate type:** CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.
- **Bitrate:** it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.
- **Video Quality:** It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.
- **I Frame interval:** It determines how many frames are allowed between "a group of pictures". When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.
- **Video Compression:** MJPEG, H264+, H264, H265 or H265+ can be optional. MJPEG is not available for main stream. If H.265/H.265+ is chosen, make sure the client system is able to decode H.265/H.265+. Compared to H.265, H.265+ saves more storage space with the same maximum bitrate in most scenes. Compared to H.264, H.265 reduces the transmission bitrate under the same resolution, frame rate and image quality.
- **Note:** Some models may support H264S (Smart H.264)/H265S(Smart H.265). Compared to H.265+/H.265, smart H.265 can spontaneously adjust the bitrate distribution according to the requirements of the actual scene. For example, when there is no human or vehicle detected, the bitrate will be automatically reduced with no effect on image quality by using H.265S.
- **Profile:** For H.264. Baseline, main and high profiles are selectable.
- **Send Snapshot:** Set the snapshot stream.
- **Video encode slice split:** If this function is enabled, smooth image can be gotten even though using the low-performance PC.
- **Watermark:** When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Click the "Audio" tab to go to the interface as shown below.

Only the models with the built-in MIC support this function.

Video	Audio
<input checked="" type="checkbox"/> Enable	
Audio Encoding	G711A
Audio Type	LIN
Audio Output	AUTO
LIN In Volume	<input type="range"/> 75
Audio Out Volume	<input type="range"/> 100


- **Audio Encoding:** G711A and G711U are selectable.
- **Audio Type:** MIC or LIN. (If the internal MIC is used, choose "MIC". If you want to use external line-level audio input camera, choose "LIN".)
- **Audio Output:** Talkback, warning or auto can be optional. If "Talkback" is selected, the audio output will be used for two-way audio. If "Warning" is selected, the audio output will be used to play the pre-defined audio alarm. If "Auto" is selected, the system will output sound for two-way audio or warning voice as needed. But when it is warning and two-way audio is being enabled simultaneously, two-way audio will be output first.

**Some modes may support built-in speaker. You can set the audio output or speaker separately.**



- **Speaker:** Talkback, warning or auto can be optional. If "Talkback" is selected, the built-in speaker will be used for two-way audio. If "Warning" is selected, the built-in speaker will be used to play the pre-defined audio alarm. If "Auto" is selected, the system will output sound for two-way audio or warning voice as needed. But when it is warning and two-way audio is being enabled simultaneously, two-way audio will be output first.
- **MIC IN/Audio Out Volume:** Set the volume as needed.

### 3.2.3. OSD Configuration


Go to **Image→OSD** interface as shown below.

	OSD Time Format	12-Hour	
	OSD Date Format	MM-DD-YYYY	
	<input checked="" type="checkbox"/> Show Timestamp		
	Device Name	IPC	
	<input checked="" type="checkbox"/> Show Device Name		
	<input type="checkbox"/> OSD Content1		<input type="checkbox"/> Add One Line
	<input type="checkbox"/> OSD Content2		<input type="checkbox"/> Add One Line
	<input type="checkbox"/> OSD Content3		<input type="checkbox"/> Add One Line
	<input type="checkbox"/> OSD Content4		<input type="checkbox"/> Add One Line

Set time stamp, camera name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the "Save" button to save the settings.

	OSD Time Format	12-Hour	
	OSD Date Format	MM-DD-YYYY	
		<input checked="" type="checkbox"/> Show Timestamp	
	Device Name	IPC	
		<input checked="" type="checkbox"/> Show Device Name	
	<input checked="" type="checkbox"/> Picture Overlay		
	<input type="checkbox"/> OSD Content2		<input type="checkbox"/> Add One Line
<input type="checkbox"/> OSD Content3		<input type="checkbox"/> Add One Line	
<input type="checkbox"/> OSD Content4		<input type="checkbox"/> Add One Line	

#### Picture Overlap Settings:

Check "OSD Content1", choose "Picture Overlay" and click  to select the overlap picture. Then click "Open" to upload the overlap picture. The pixel of the image shall not exceed 200\*200, or it cannot be uploaded.

### 3.2.4. Video Mask

Go to **Image**→**Video Mask** interface as shown below. A maximum of 4 zones can be set up.



To set up video mask:

- 1) Enable video mask.
- 2) Click the "Draw Area" button and then drag the mouse to draw the video mask area.
- 3) Click the "Save" button to save the settings.
- 4) Return to the live to verify that the area have been drawn as shown as blocked out in the image.




To clear the video mask:

Click the "Clear" button to delete the current video mask area.

### 3.2.5. ROI Configuration

Go to **Image→ROI Config** interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

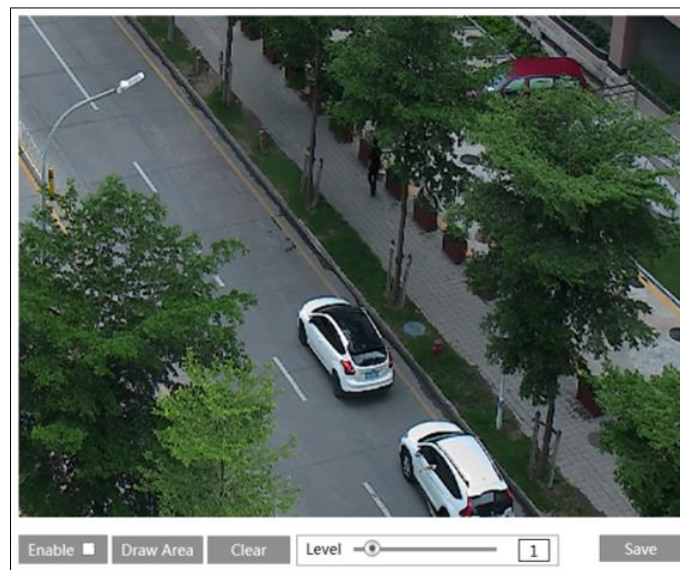


- 1) Check "Enable" and then click the "Draw Area" button.
- 2) Drag the mouse to set the ROI area.
- 3) Set the level.
- 4) Click the "Save" button to save the settings.





### 3.2.6. Lens Control


**This function is only available for the model with motorized zoom lens.** Within this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically. Go to **Config→Image→Zoom/Focus** interface to set.

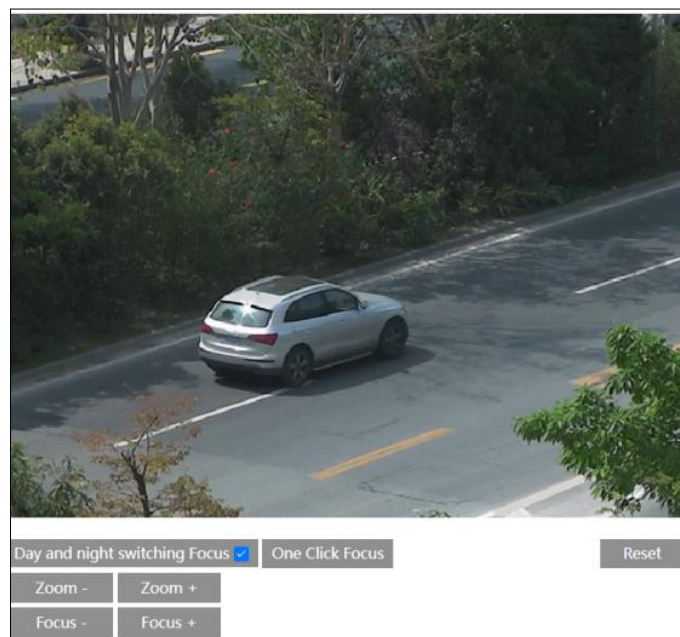

### 3.2.7. Smart Supplement Light Configuration

**This function is only available for some models.**

- 1) Set the illumination mode to "Smart Supplement Light" in the Display Setting interface.
- 2) Go to **Config→Image→Smart Supplement Light**.

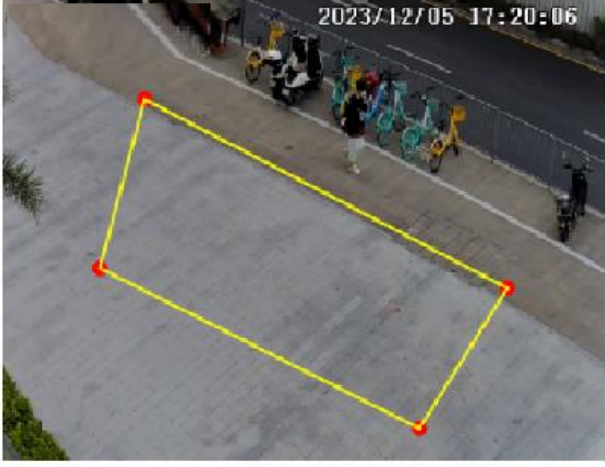

Alarm Area 1 ▾

---

Detection target and sensitivity

Target	Sensitivity
<input type="checkbox"/> Human	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; right: -10px; top: -5px;">50</div> </div> </div>
<input checked="" type="checkbox"/> Motor Vehicle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; right: -10px; top: -5px;">50</div> </div> </div>
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; right: -10px; top: -5px;">50</div> </div> </div>

Duration 300 Seconds ▾

Draw Area
Clear

Save

- 3) Set alarm areas. Select the alarm area number. Four alarm areas can be added.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Stop Draw" button to stop drawing. Click the "Clear" button to delete the alarm area.

- 4) Set the detection target and sensitivity. "Human" is selected by default. You can also select "Motor Vehicle" or "Motorcycle/Bicycle" as needed.

**Sensitivity:** The higher the value is, the easier the white light will be triggered by targets.

- 5) Set the duration of the white light. In low ambient light, the system will automatically turn on the visible infrared light. Once there are people/vehicles appearing in the set alarm area, it will automatically switch to full-brightness visible white light. When people/vehicles leaving the alarm area exceed the set duration and no other persons/vehicles are detected during the period, it will resume to infrared light.


**Note :** If the people/vehicles staying and not moving in the detection area exceed the set duration, it will resume to infrared light too.

- 6) Click "Save" to save the settings.

### 3.3. Alarm Configuration

#### 3.3.1. Motion Detection

Go to **Alarm→Motion Detection** to set motion detection alarm.

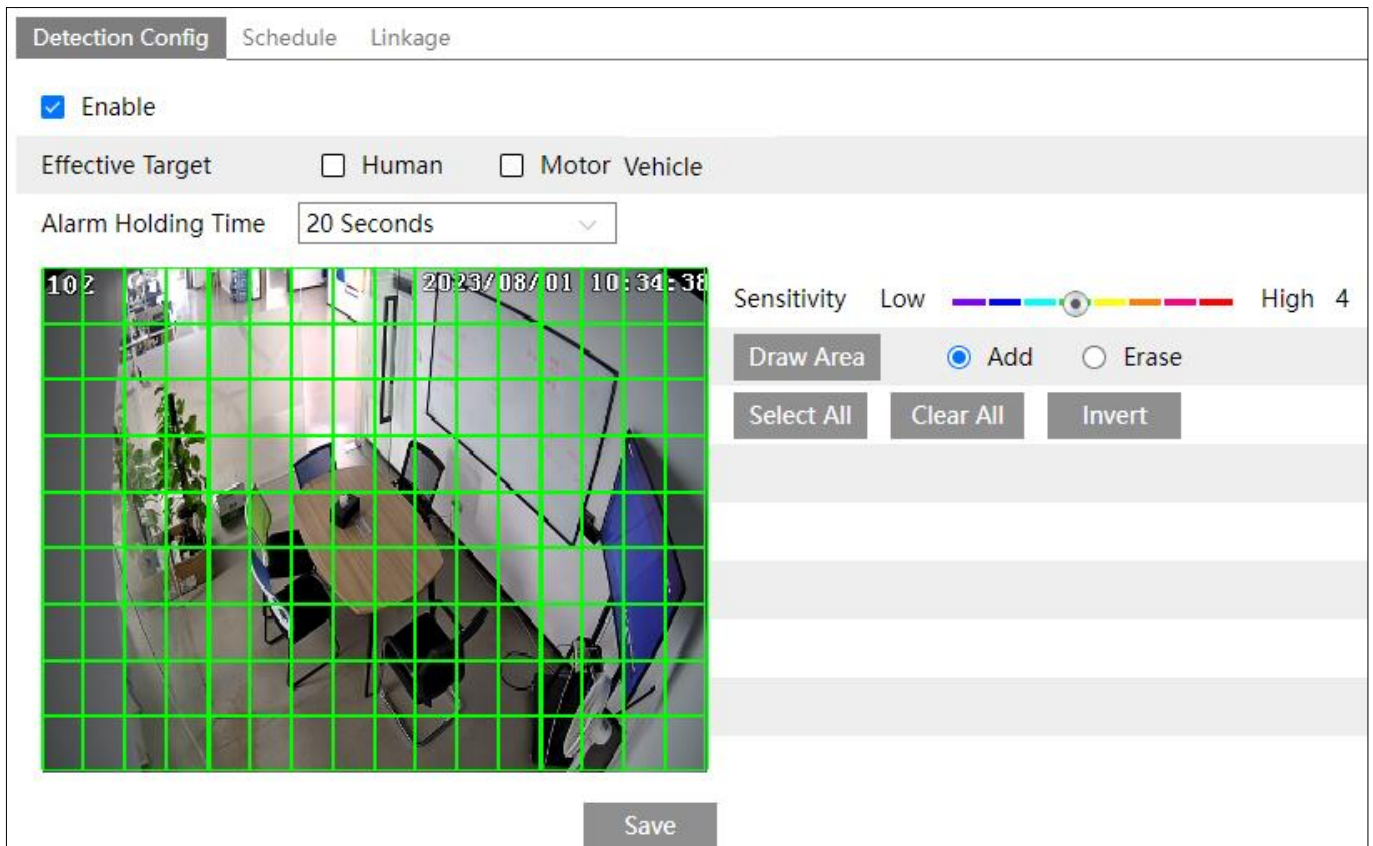

- 1) Check "Enable" check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.
  - **Effective Target:** Choose "Human" or "Motor Vehicle". If "Human/Motor Vehicle" is enabled, the camera will only detect the movement of human/motor vehicle. If no target is enabled, alarms will be triggered when the moving object appears on the image, including human, vehicle or other moving objects.
  - **Alarm Holding Time:** it refers to the time that the alarm extends for after an alarm ends. For instance, if the alarm holding time is set to 20 seconds, once the camera detects a motion, it will go to alarm and would not detect any other motion in 20 seconds. If there is another motion detected during this period, it will be considered as continuous movement; otherwise it will be considered as a single motion.
- 2) Set motion detection area and sensitivity.
  - Move the "Sensitivity" scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.
  - Select "Add" and click "Draw". Drag the mouse to draw the motion detection area; Select "Erase" and drag the mouse to clear motion detection area.
  - After that, click the "Save" to save the settings.
- 3) Set the schedule for motion detection.

Detection Config
Area and Sensitivity
Schedule

Erase     Add
 
 Manual Input   Select All   Invert   Clear

**Week Schedule**

	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24	
Sun.		Apply settings to   Manual Input   Select All   Invert   Clear
Mon.		Apply settings to   Manual Input   Select All   Invert   Clear
Tue.		Apply settings to   Manual Input   Select All   Invert   Clear
Wed.		Apply settings to   Manual Input   Select All   Invert   Clear
Thu.		Apply settings to   Manual Input   Select All   Invert   Clear
Fri.		Apply settings to   Manual Input   Select All   Invert   Clear
Sat.		Apply settings to   Manual Input   Select All   Invert   Clear

**Holiday Schedule**

Date(MM-DD) 





+

	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24	
		Apply settings to   Manual Input   Select All   Invert   Clear

### Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.


- "Add": Add the schedule for a special day. Drag the mouse to set the time on the timeline.
- "Erase": Delete the schedule. Drag the mouse to erase the time on the timeline.
- Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

### Day schedule

Set the alarm time for alarm a special day, such as a holiday.

**Note:** Holiday schedule takes priority over weekly schedule.

- 4) Click "Linkage" to configure the alarm linkage items.

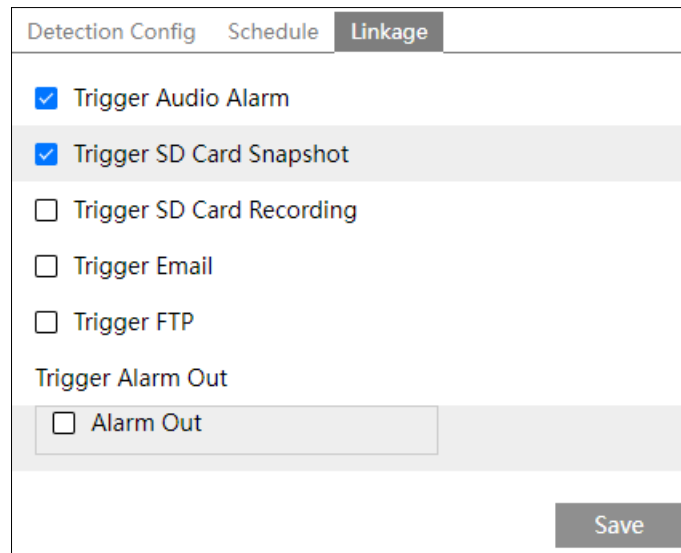


- **Trigger Audio Alarm:** If selected, the warning voice will play automatically on detecting a motion based alarm. (Please set the warning voice first. See [Audio Alarm](#) for details). Only some models support this function.
- **Trigger SD Card Snapshot:** If selected, the system will capture images on motion detection and save the images on an SD card.
- **Trigger SD Card Recording:** If selected, video will be recorded on an SD card on motion detection.
- **Trigger Email:** If "Trigger Email" and "Attach Picture" are checked (email address must be set first in the [Email configuration](#) interface), the captured pictures and triggered event will be sent into those addresses.
- **Trigger FTP:** If "Trigger FTP" and "Attach Picture" are checked, the captured pictures will be sent into FTP server address. Please refer to [FTP configuration](#) section for more details.
- **Trigger Alarm Out:** If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm. Only some models support this function.

### 3.3.2. Exception Alarm

- **SD Card Full**

- 1) Go to Config→Alarm→Exception Alarm→SD Card Full.

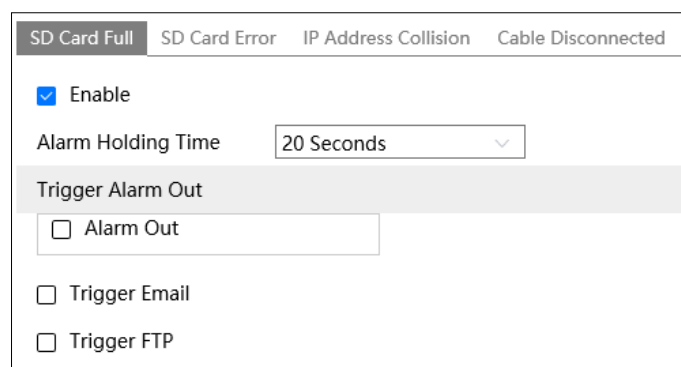


- 2) Click "Enable".
- 3) Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) section for details.

- **SD Card Error**

When there are some errors in writing SD card, the corresponding alarms will be triggered.


- 1) Go to Config→Alarm→ Exception Alarm →SD Card Error as shown below.

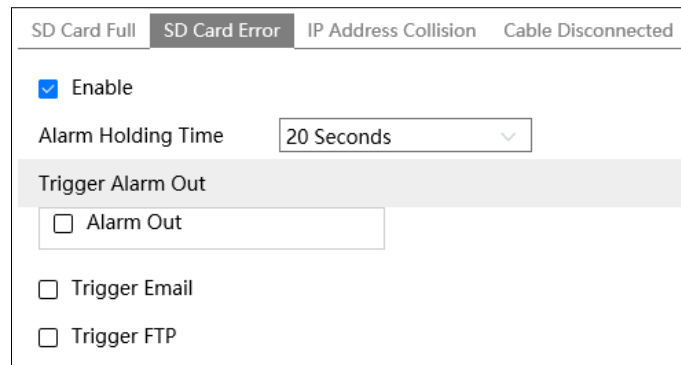

- 2) Click "Enable".
- 3) Set the alarm holding time and alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to Motion Detection section for details.

- **IP Address Conflict**

- 1) Go to Config→Alarm→ Exception Alarm→IP Address Collision as shown below.

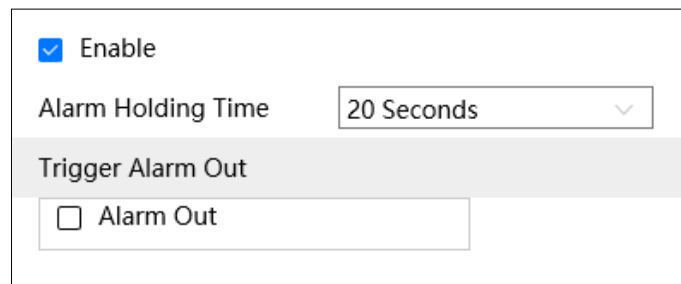


- 2) Click "Enable" and set the alarm holding time.
- 3) Trigger alarm out. When the IP address of the camera is in conflict with the IP address of other cameras, the system will trigger the alarm out.

**Note:** if your camera doesn't support alarm out, you can go to **Config→Maintenance→ Operation Log** interface to check the relevant alarm information after enabling this function.

- **Cable Disconnection**

- 1) Go to Config→Alarm→ Exception Alarm →Cable Disconnected as shown below.

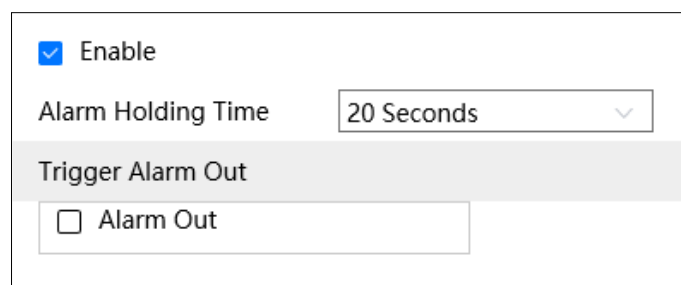


- 2) Click "Enable" and set the alarm holding time.
- 3) Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

**Note:** if your camera doesn't support alarm out, you can go to **Config→Maintenance→ Operation Log** interface to check the relevant alarm information after enabling this function.

### 3.3.3. Alarm In

This function is only available for some models. To set sensor alarm (alarm in):

Go to **Config→Alarm→Alarm In** interface as shown below.

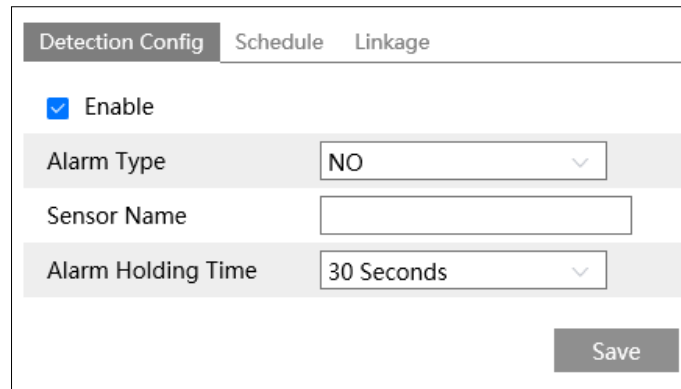

- 1) Click "Enable" and set the alarm type, alarm holding time and sensor name.
  - 2) Click "Save" button to save the settings.
  - 3) Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See Schedule Recording).
  - 4) Click "Linkage" to configure the alarm linkage items.
- **Trigger Audio Alarm:** If selected, the warning voice will be uttered when the sensor alarm is triggered. Please set the warning voice first. See Audio Alarm for details. (Only some models support this function)
  - **Trigger Light Alarm:** If selected, the light of the camera will flash when the sensor alarm is triggered. Please set the light flashing time and frequency first. See Light Alarm for details. (Only some models support this function)
  - **Trigger SD Card Snapshot:** If selected, the system will capture images when the sensor alarm is triggered and save the images on an SD card.
  - **Trigger SD Card Recording:** If selected, video will be recorded on an SD card when the sensor alarm is triggered.
  - **Trigger Email:** If "Trigger Email" and "Attach Picture" are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.
  - **Trigger FTP:** If "Trigger FTP" and "Attach Picture" are checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration section for more details.
  - **Day/night switch linkage:** if enabled, the system will switch to day or night mode upon the occurrence of the sensor alarm. (In white light mode, this function is not available)
  - **Trigger Alarm Out:** If selected, this would trigger an external relay output that is connected to the camera when the sensor alarm is triggered (This function is only available for the models with the alarm output interface; some models may support two alarm output interfaces).

Detection Config	Schedule	Linkage
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Trigger Audio Alarm
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Trigger SD Card Snapshot
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> Trigger SD Card Recording
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> Trigger Email
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> Trigger FTP
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> Day/night switch linkage
<b>Trigger Alarm Out</b>		
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/> Alarm Out

If there are two sensors, please select the sensor ID. Click "Apply settings to" to quickly apply the settings to the other alarm input.

### 3.3.4. Alarm Out

This function is only available for some models. Go to **Config→Alarm→Alarm Out**.

Alarm Out Mode	Alarm Linkage
Alarm Out Name	alarmOut1
Alarm Holding Time	20 Seconds
Alarm Type	NC
Save	

- **Alarm Out ID:** Some models may support two alarm output interfaces. The alarm out can be set respectively by selecting alarm out ID.
- **Alarm Out Mode:** Alarm linkage, manual operation, day/night switch linkage and timing are optional.
- **Alarm Linkage:** Having selected this mode, select alarm out name, alarm holding time at the "Alarm Holding Time" pull down list box and alarm type.
- **Manual Operation:** Having selected this mode, select the alarm type and click "Open" to trigger the alarm out immediately; click "Close" to stop alarm.

 


Alarm Out Mode	Manual Operation
Alarm Type	NC
Manual Operation	<input type="button" value="Open"/> <input type="button" value="Close"/>
<input type="button" value="Save"/>	

- **Day/Night Switch Linkage:** Having selected this mode, select the alarm type and then choose to open or close alarm out when the camera switches to day mode or night mode. (In white light mode, this function is not available)

Alarm Out Mode	Day/night switch linkage
Alarm Type	NC
Day	Close
Night	Close

- **Timing:** Select the alarm type. Then click "Add" and drag the mouse on the timeline to set the schedule of alarm out; click "Erase" and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

Alarm Out Mode	Timing
Alarm Type	NC
Time Range	<div style="text-align: right;"> <input type="radio"/> Erase <input checked="" type="radio"/> Add                 </div>  <div style="text-align: right;">Manual Input</div>
<input type="button" value="Save"/>	

### 3.3.5. Alarm Server

Go to **Alarm→Alarm Server** interface as shown below.

Server Address	0.0.0.0
Port	8010
Heartbeat	Disable
Heartbeat interval	30 Second
 <input type="button" value="Edit"/>	

Click "Edit" to set the alarm server.

Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.


Click  to view the entire server address; click  to hide a part of sensitive data.

### 3.3.6. Audio Alarm

Only some models support audio alarm function. If your camera doesn't support this function, please skip the following instructions.

Go to **Alarm**→**Audio Alarm** interface as shown below.

Enable audio alarm. If disabled, the camera will not play the desired warning voice even if an event triggers audio alarm. Additionally, you need to enable audio in the audio configuration interface and the speaker type should be "Warning" or "Auto", or the warning voice cannot play too.

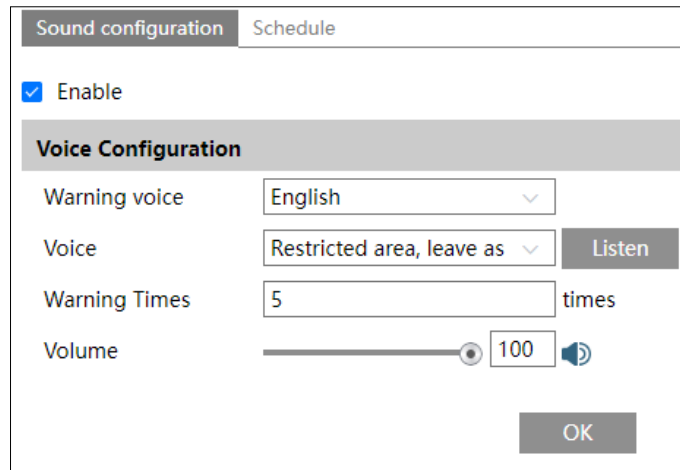

The screenshot shows the 'Sound configuration' interface with two tabs: 'Sound configuration' (active) and 'Schedule'. Under 'Sound configuration', there is a checked 'Enable' checkbox. Below that is a 'Voice Configuration' section with the following settings: 'Warning voice' set to 'English', 'Voice' set to 'Restricted area, leave as' with a 'Listen' button, 'Warning Times' set to '5' times, and 'Volume' set to '100' with a speaker icon. An 'OK' button is located at the bottom right of the configuration area.

- 1) Select the warning voice. If you want to customize the voice, you can choose "Customize". Click "Select File" or "Browse" to choose the audio file you want to upload and then enter the audio name. Finally, click "Upload" to upload the audio file. Note that the format of the audio file must meet the requirement (see Tips), or it will not be uploaded. After you upload the audio file, you can select the audio name from the audio list and click "Listen" to listen to it. Click "Delete" to delete the audio.

Sound configuration
Schedule

Enable

Voice Configuration

Warning voice

Voice  Listen Delete

Warning Times  times

Volume  100

Upload Audio

Upload Path  Select File

Audio Name  Upload

Tips: audio format (WAV, 8000Hz, monophonic, 16bit, less than 200K)

Voice Record

Save Path  Browse

Audio Name

Record Audio  10 Start Upload

OK

You can also record your own voice in the above interface and then upload.

- Insert the microphone into your PC.
- Click "Browse" to choose the save path of the audio you want to record.
- Set the record audio volume and then click "Start" to start recording your voice.
- Click "Upload" to upload your customized voice.

**Note:** when you access your camera by the web browser without the plug-in, "video record" is not available in the above interface.

- 2) Select the voice and then set the warning times and volume as needed. Warning times: it ranges from 1 to 50.
- 3) Set the schedule of audio alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).
- 4) Click "OK" to save the settings.

### 3.3.7. Light Alarm

Go to **Alarm**→**Light Alarm** interface as shown below.

- 1) Enable light alarm as needed. Enable light alarm as needed. If it is disabled, the flashing light will not be turned on when the light alarm is triggered.
- 2) Set the flashing time and frequency of the light.

Light Configuration		Schedule
<input checked="" type="checkbox"/> Enable		
Flashing Time	<input type="text" value="2"/>	Second
Flashing Frequency	<input type="text" value="Low"/>	
<input type="button" value="OK"/>		

Flashing time: the flashing time ranges from 1 second to 60 seconds.

Flashing Frequency: three options- low, middle and high

- 3) Set the schedule of audio alarm. The setup steps of the schedule are the same as the schedule recording setup. (See Schedule Recording).

### 3.3.8. Video Exception

This function can detect changes in the surveillance environment affected by the external factors.

To set video exception detection:

Go to **Config→Event→Video Exception** interface as shown below.

Detection Config		Sensitivity	Linkage
<input checked="" type="checkbox"/> Scene Change Detection			
<input checked="" type="checkbox"/> Video Blur Detection			
<input checked="" type="checkbox"/> Abnormal Color Detection			
Alarm Holding Time	<input type="text" value="20 Seconds"/>		
<input type="button" value="Save"/>			

- 1) Enable the applicable detection that's desired.
  - **Scene Change Detection:** Alarms will be triggered if the scene of the monitor video has changed.
  - **Video Blur Detection:** Alarms will be triggered if the video becomes blurry.
  - **Abnormal Color Detection:** Alarms will be triggered if the image is abnormal because of color deviation.
- 2) Set the alarm holding time.
- 3) Click "Save" button to save the settings.
- 4) Set the sensitivity of the exception detection. Click "Sensitivity" tab to go to the interface as shown below.



Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click "Save" button to save the settings.

- **The sensitivity value of Scene Change Detection:** The higher the value is, the more sensitive the system responds to the amplitude of the scene change.
  - **The sensitivity value of Video Blur Detection:** The higher the value is, the more sensitive the system responds to the blurriness of the image.
  - **The sensitivity value of Abnormal Color Detection:** The higher the value is, the more sensitive the system responds to the color shift of the image.
- 5) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Motion Detection section for details.

After checking "Trigger SD Card Snapshot" and/or "Trigger SD Card Recording", you can search the recorded files or snapshots of video exception by selecting the "Common" event.

- **The requirements of camera and surrounding area**


- 1) Auto-focusing function should not be enabled for exception detection.
- 2) Try not to enable exception detection when light changes greatly in the scene.
- 3) Please contact us for more detailed application scenarios.

### 3.3.9. Audio Exception

Alarms will be triggered when the abnormal sound is detected in the surveillance scene, such as the sudden increase/decrease of the sound intensity.

To set audio exception detection:

- 1) Go to **Alarm→Audio Exception** interface as shown below.

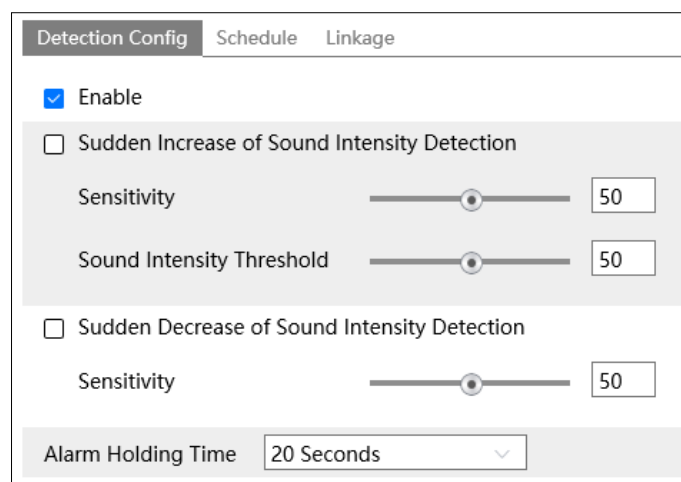

- 2) Enable audio exception.
- 3) Select the audio exception detection types.

- **Sudden Increase of Sound Intensity Detection:** Detect sudden increase of sound intensity. If enabled, sensitivity and sound intensity threshold are configurable. Alarms will be triggered when the detected sound intensity exceeds the sound threshold.
- **Sensitivity:** The higher the value is, the easier the alarm will be triggered.
- **Sound Intensity Threshold:** It is the sound intensity reference for the detection. The lower the value is, the easier the alarm will be triggered. It is recommended to set as the average sound intensity in the environment. The louder the environment sound, the higher the value should be. Please adjust it according to the actual environment condition.
- **Sudden Decrease of Sound Intensity Detection:** Detect sudden decrease of sound intensity. Please set the sensitivity as needed. The higher the value is, the easier the alarm will be triggered.


### Real-time audio graphic:

Red wavy line stands for the current detected sound intensity.

Navy blue line stands for the environment (background) sound intensity.

Green line stands for the sound intensity threshold.

In order to reduce false alarm, it is recommended to set the sensitivity and sound intensity threshold according to the real-time audio graphic.

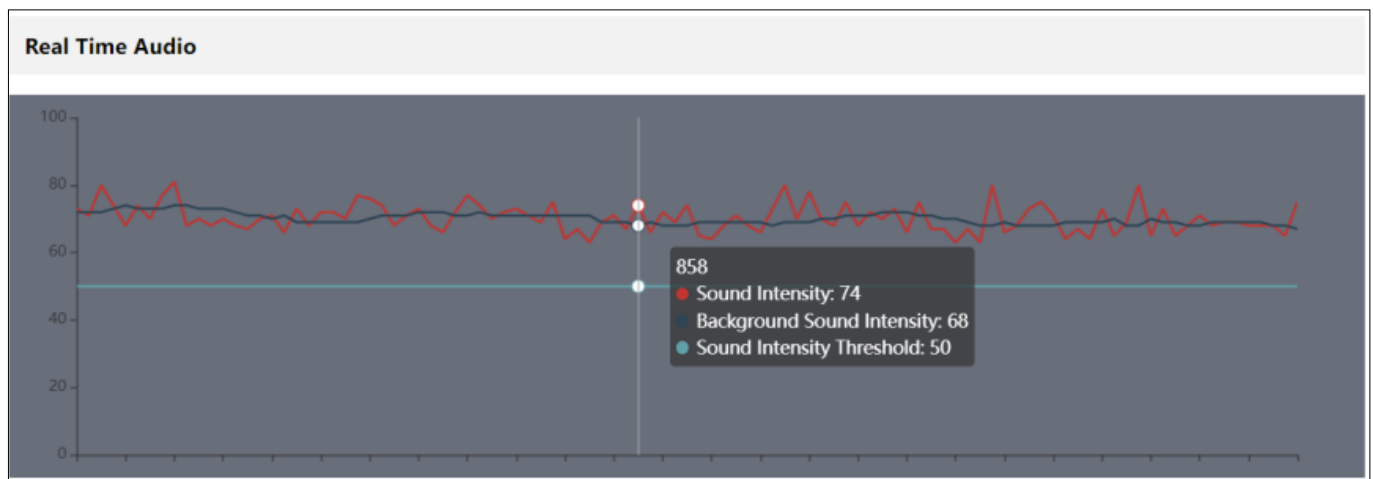


- 4) Set the alarm holding time and click "Save" to save the settings.
- 5) Set the schedule of the audio exception detection. The setup steps of schedule are the same as the schedule recording (See Schedule Recording).
- 6) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.

**Note:** The alarm recording type triggered by audio exception event is "Common". In the search interface, you can search the recorded files of audio exception by selecting the "Common" event.

### 3.3.10. Disarming

Only some models support this function.

You can disarm alarm linkage actions quickly in this interface.

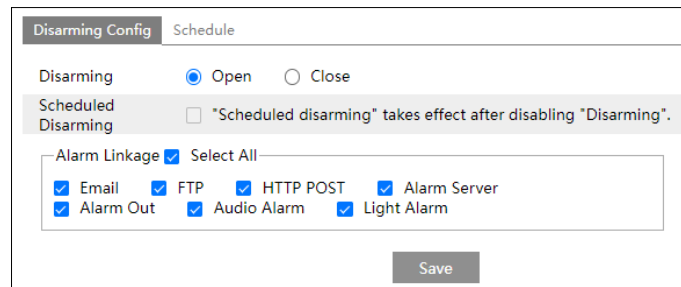

- **Disarming:** The system stops triggering alarm linkage actions immediately.
- **Scheduled Disarming:** The system stops triggering alarm linkage actions in the selected period. Click "Schedule" to set the schedule. The setup steps of schedule are the same as the motion detection schedule settings (See Motion Detection section for details).


**Note:** After "Disarming" or "Scheduled Disarming" is enabled, the reported general alarms (the alarm start time and end time of alarm out and audio alarm) will probably not match the actual situation. You need to handle it manually.

### 3.4. Event Configuration

For more accuracy, here are some recommendations for installation.

- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.
- Avoid scenario where the object's color is similar to the background color.
- At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.

You can enable the event type as needed. Go to **Config→System→Application Scenarios** interface as shown below.

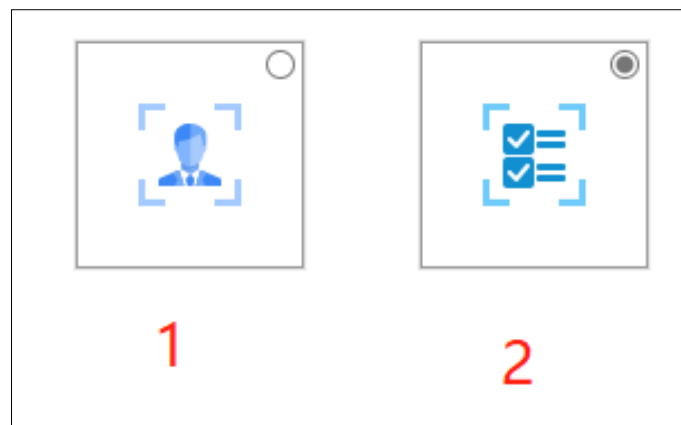

**Event Type:** 1- Face Event; 2- Smart Event

The default event type is smart event. If you want to switch to face event, please select face event and then click "Save". After successful reboot, the corresponding event will be displayed. Select and set as needed.

**Note:** You can enable multiple smart detection events (such as line crossing detection, region intrusion detection, region exiting detection, etc.) simultaneously, but detecting multiple smart events in the same time will cause the reduction in performance and affect the detection results. Please enable smart events according to the actual performance of your camera.

### 3.4.1. Object Abandoned/Missing

Alarms will be triggered when the objects are removed from or left at the pre-defined area.

To set abandoned/missing object detection:

Go to **Config**→**Event**→**Object Abandoned/Missing** interface as shown below.


Detection Config
Schedule
Linkage

Enable

Enable Abandoned Object Detection  
 Enable Missing Object Detection

Duration of Delay  Second

Alarm Holding Time



Alarm Area

Stop Draw
Clear

Save

1) Enable abandoned/missing object detection and then select the detection type.

- **Enable Abandoned Object Detection:** Alarms will be triggered if there are items left in the pre-defined area.
- **Enable Missing Object Detection:** Alarms will be triggered if there are items missing in the pre-defined area.
- **Duration of Delay:** it is the alarm delay time of the object left in the region (ranging from 10~3600s) or the alarm delay time of the object removed from the region (ranging from 3~3600s). For example, if "Enable Abandoned Object Detection" is selected and the duration



of delay is set as 10, alarms will be triggered after the object is left and stay in the region for 10s, but when someone takes away the object within 10s, alarms will not be triggered.

- 2) Set the alarm holding time.
- 3) Set the alarm area of the abandoned/missing object detection. Set the alarm area number and then enter the desired alarm area name. Only one alarm area can be added. Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Stop Draw" button to stop drawing. Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.
- 4) Click "Save" button to save the settings.
- 5) Set the schedule of the abandoned/missing object detection. The setup steps of schedule are the same as the motion detection schedule settings (See Motion Detection section for details).
- 6) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Motion Detection section for details.

- **The configuration requirements of camera and surrounding areas**

- 1) The range of the detection object should occupy from 1/50 to 1/3 of the entire image.
- 2) The detection time of objects in the camera shall be from 3 to 5 seconds.
- 3) The defined area cannot be covered frequently and continuously (like people and traffic flow).
- 4) It is necessary for missing object detection that the drawn frame must be very close to the margin of the object in enhancing the sensitivity and accuracy of the detection.
- 5) Abandoned/missing object detection cannot determine the objects' ownership. For instance, there is an unattended package in the station. Abandoned object detection can detect the package itself but it cannot determine to whom it belongs to.
- 6) Try not to enable abandoned/missing object detection when light changes greatly in the scene.
- 7) Try not to enable abandoned/missing object if there are complex and dynamic environments in the scene.
- 8) Adequate light and clear scenery are very important to abandoned/missing object detection.

### 3.4.2. Line Crossing

**Line Crossing:** Alarms will be triggered if the target crosses the pre-defined alarm lines.

Go to **Config**→**Event**→**Line Crossing** interface as shown below.

Detection Config
Schedule
Linkage

Enable

Save Original Picture To SD Card


Save Target Picture To SD Card

Detection target and sensitivity

Target	Sensitivity
<input checked="" type="checkbox"/> Human	<input type="range" value="50"/> 50
<input checked="" type="checkbox"/> Motor Vehicle	<input type="range" value="50"/> 50
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<input type="range" value="50"/> 50

Push target trajectory with a persistent connection

Alarm Holding Time



**Alarm Line**

Alarm Line

Direction

**Target Size Filter**

Target

Min Size Width  %

Height  %

Max Size Width  %
 

Height  %

Draw Area
Clear
Draw Target Size

Save

1) 1. Enable line crossing detection and select the snapshot type and the detection target.

- **Save Original Picture to SD Card:** If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets cross the alarm line.
- **Save Target Picture to SD Card:** If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets cross the alarm line.
- **Note:** To save snapshots to the local PC, please enable "Local Smart Snapshot Storage" in the local config interface first. To save snapshots to the SD card, please install an SD card first.
- **Detection Target:**
- **Human:** Select it and then alarms will be triggered if someone crosses the pre-defined alarm lines.
- **Motor Vehicle:** Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm lines.
- **Motorcycle/Bicycle:** Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) crosses the pre-defined alarm lines.

All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

- **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering line crossing alarm.
- 2) Set the alarm holding time.
  - 3) Set alarm lines and target size filter for line crossing detection.

Set the alarm line number and direction. Four lines can be added. Multiple lines cannot be added simultaneously.

- **Direction** : A<->B, A->B and A<-B optional. This indicates the direction of the intruder who crosses over the alarm line that would trigger the alarm.
- **A<->B**: The alarm will be triggered when the intruder crosses over the alarm line from B to A or from A to B.
- **A->B**: The alarm will be triggered when the intruder crosses over the alarm line from A to B.
- **A<-B**: The alarm will be triggered when the intruder crosses over the alarm line from B to A.

Click the "Draw Area" button and then drag the mouse to draw a line in the image. Click the "Stop Draw" button to stop drawing. Click the "Clear" button to delete the lines. Click the "Save" button to save the settings.

#### To set target size filter:

Click "Draw Target Size" to draw the maximum and minimum size of a specific target as shown below.



**Alarm Line**

Alarm Line	1
Direction	A->B

**Target Size Filter**

Target	Motor Vehicle	
Min Size Width	14 %	Height 9 %
Max Size Width	90 %	Height 90 %

Draw Area
Clear
Draw Target Size

Save

- **Target:** choose "Human", "Motor Vehicle" or "Motorcycle/Bicycle" as needed.

Green box is the maximum target detection box; yellow box is the minimum target detection box.

Click the green box to edit the maximum target detection box; click the yellow box to edit the minimum target detection box.

Drag one of four corners of the green or yellow box to change the box size. The corresponding size value on the right will be changed too. You can also enter the digital number to directly change the box size.

Click and drag the green or yellow box to move its position.

Finally, click "Save" to save the settings.

After the target size range is set, only the target whose size is between the minimum value and the maximum value can be detected.

- 4) Click "Save" button to save the settings.
- 5) Set the schedule of line crossing detection. The setup steps of schedule are the same as the motion detection schedule settings (See Motion Detection section for details).
- 6) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.

- **Configuration requirements of camera and surrounding area**

- 1) Auto-focusing function should not be enabled for line crossing detection.
- 2) Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
- 3) Cameras should be mounted at a height of 2.8 meters or above.
- 4) The recommended depression angle of the camera is from 30° to 45° (See Outdoor Mounting example).

For pedestrians, their heads and main bodies should be clearly visible on a video.



For vehicles, the depression angle should not be more than the recommended value. The sideways or horizontal viewing angle is recommended on a video (see below).




- 5) Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
- 6) Adequate light and clear scenery are crucial for line crossing detection.
- 7) Please adjust the installation position or focus to meet the requirements of the target recognition size.

The recommended target recognition size:

Percentage	Human	Motor Vehicle	Motorcycle/Bicycle
Minimum (Width × Height)	4% × 8%	8% × 8%	4% × 4%
Maximum (Width × Height)	50% × 50%	50% × 50%	50% × 50%

**Note:** The percentage means that a target occupies the percentage of the entire image. For example: In a 1080P(1920×1080) video image, the minimum resolution of human is 80×160 (w =1920×4%=80, h=1920×8%=160)

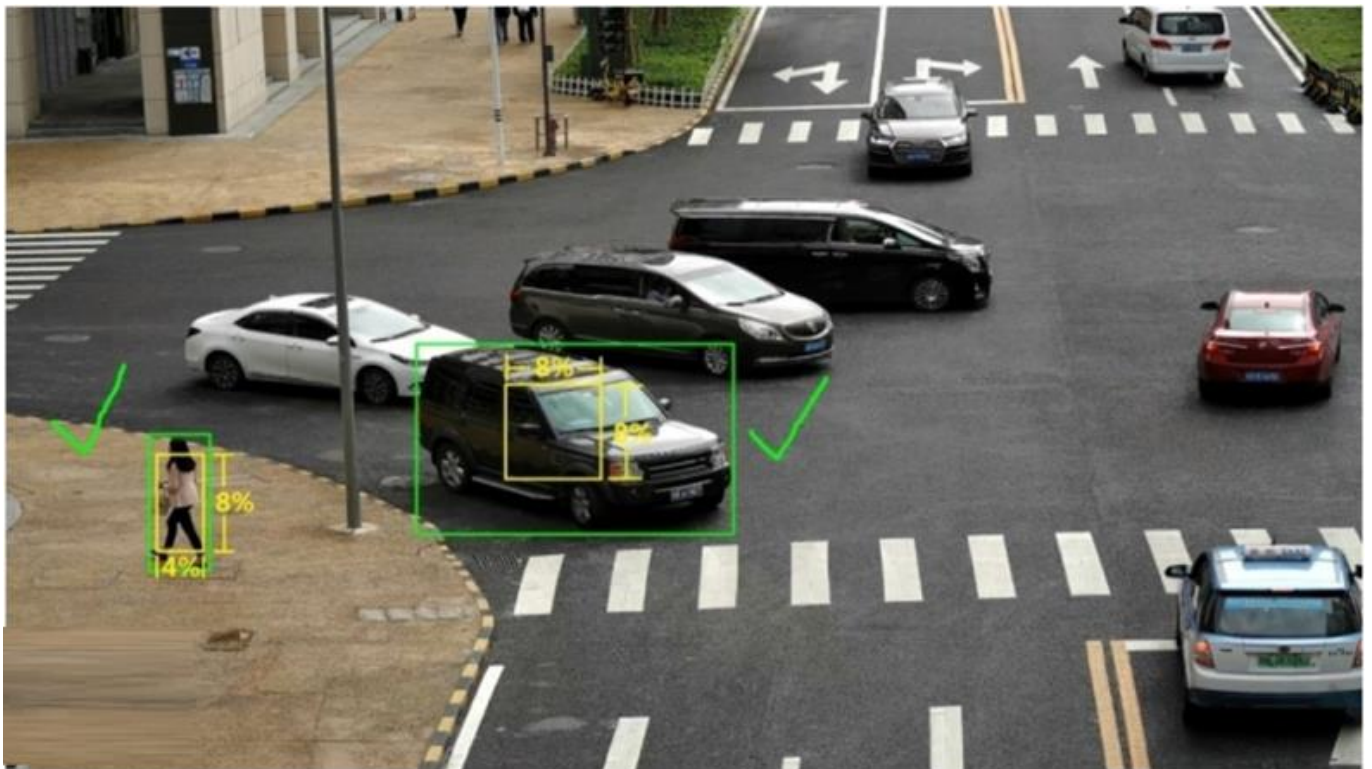

*Correct Example*

The target recognition box meets the requirements of the minimum size. The yellow box stands for the minimum recognition size. The green box stands for the set target box.



*Wrong Example*


The yellow box stands for the minimum recognition size. The green box stands for the set target box. These two target recognition boxes don't meet the requirement of the minimum size. Therefore, you need to adjust the camera position or focus as needed.

8) Installation suggestion:

Outdoor mounting:


The optimal detection distance varies due to different focal length. Please refer to the following table.

Focal Length	Installation Height (m)	Human/Motorcycle/Bicycle		Motor Vehicle	
		Maximum Distance (m)	Optimal Distance (m)	Maximum Distance (m)	Optimal Distance (m)
2.8mm	3-10	8	4-8	15	10-15
3.6mm	3-10	10	5-10	20	15-20
12mm	3-10	25	10~20	35	15~30
22mm	3-10	45	30~40	70	20~50

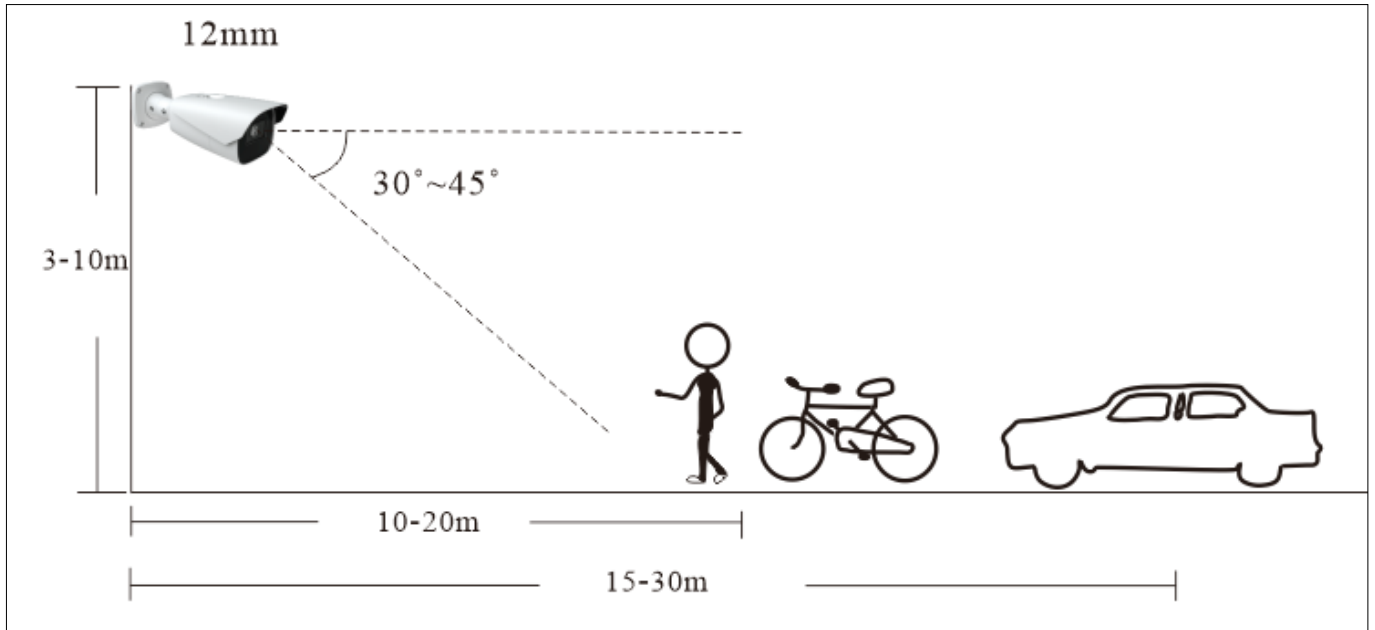

Example for 12mm focal length

### Indoor Mounting

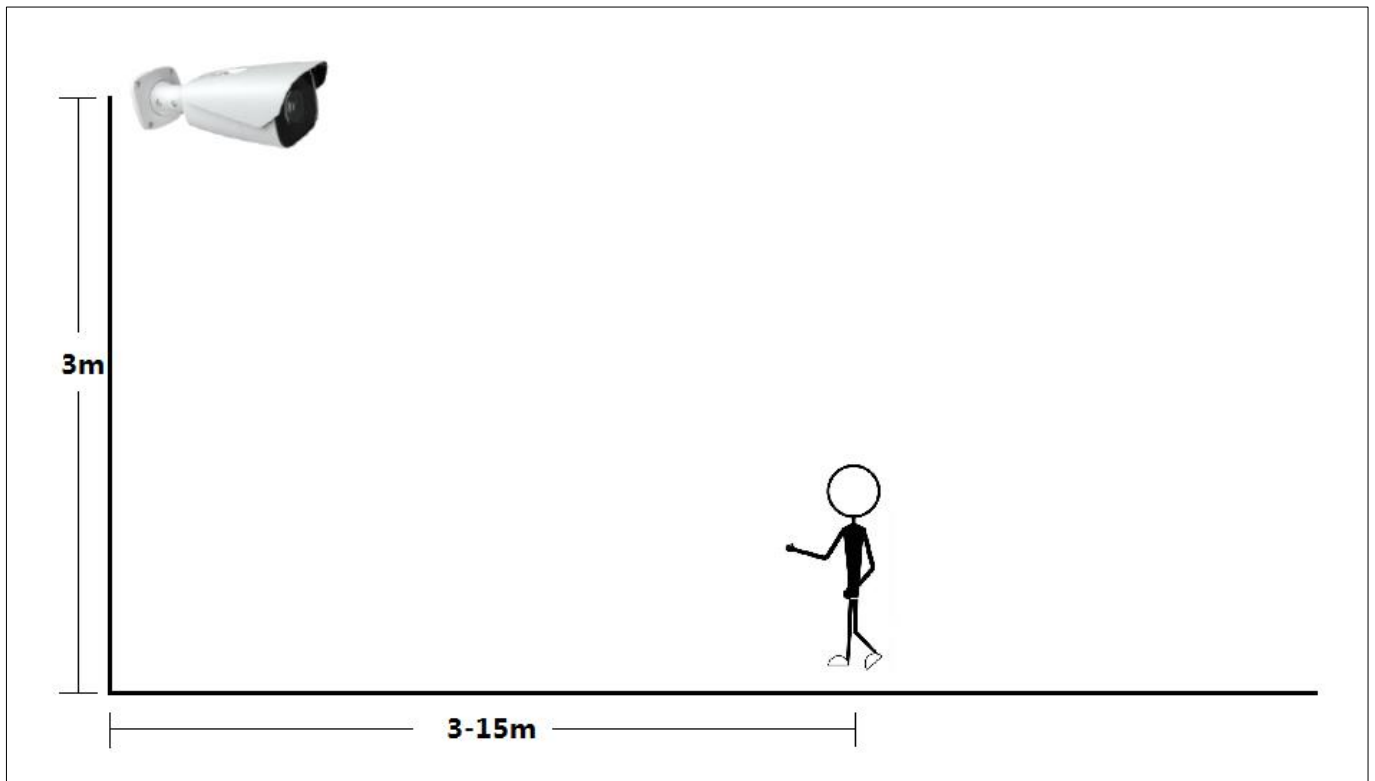

### 3.4.3. Region Intrusion

**Region Intrusion:** Alarms will be triggered if the target intrudes into the pre-defined areas. This function can be applicable to important supervision places, danger areas and prohibited areas, like military administrative zones, high danger areas, no man's areas, etc.

Go to **Config→Event→Region Intrusion** interface as shown below.

Detection Config
Schedule
Linkage

Enable

Save Original Picture To SD Card


Save Target Picture To SD Card

Detection target and sensitivity

Target	Sensitivity
<input checked="" type="checkbox"/> Human	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 0; top: -5px; width: 100%; height: 2px; background: linear-gradient(to right, #ccc, #ccc);"></div> <div style="position: absolute; left: 20%; top: -5px; width: 10%; height: 10px; border: 1px solid #ccc; border-radius: 50%;"></div> </div> <input style="width: 40px; text-align: center; margin-left: 5px;" type="text" value="50"/> </div>
<input checked="" type="checkbox"/> Motor Vehicle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 0; top: -5px; width: 100%; height: 2px; background: linear-gradient(to right, #ccc, #ccc);"></div> <div style="position: absolute; left: 20%; top: -5px; width: 10%; height: 10px; border: 1px solid #ccc; border-radius: 50%;"></div> </div> <input style="width: 40px; text-align: center; margin-left: 5px;" type="text" value="50"/> </div>
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 0; top: -5px; width: 100%; height: 2px; background: linear-gradient(to right, #ccc, #ccc);"></div> <div style="position: absolute; left: 20%; top: -5px; width: 10%; height: 10px; border: 1px solid #ccc; border-radius: 50%;"></div> </div> <input style="width: 40px; text-align: center; margin-left: 5px;" type="text" value="50"/> </div>

Push target trajectory with a persistent connection

Alarm Holding Time



Alarm Area

Target Size Filter
 

Target	<input style="width: 100%;" type="text" value="Human"/>	
Min Size Width	<input style="width: 40px;" type="text" value="1"/> %	Height <input style="width: 40px;" type="text" value="1"/> %
Max Size Width	<input style="width: 40px;" type="text" value="90"/> %	Height <input style="width: 40px;" type="text" value="90"/> %

Draw Area
Clear
Draw Target Size

Save

1) Enable region intrusion detection and select the snapshot type and the detection target.

- **Save Original Picture to SD Card:** If it is enabled, the detected original pictures will be captured and saved to the SD card when the target intrudes into the pre-defined areas.
- **Save Target Picture to SD Card:** If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the target intrudes into the pre-defined areas.
- **Note:** To save snapshots to the local PC, please enable "Local Smart Snapshot Storage" in the local config interface first. To save snapshots to the SD card, please install an SD card first.
- **Detection Target:**
- **Human:** Select it and then alarms will be triggered if someone intrudes into the pre-defined area.
- **Motor Vehicle:** Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) intrudes into the pre-defined area.
- **Motorcycle/Bicycle:** Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) intrudes into the pre-defined area.

All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if intrusion detection is enabled.



- **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering region intrusion alarm.
- 2) Set the alarm holding time.
  - 3) Set alarm areas and target size filter for region intrusion detection.

Set the alarm area number. Four alarm areas can be added.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Stop Draw" button to stop drawing. Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

**Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).

- 4) Click "Save" button to save the settings.
- 5) Set the schedule of region intrusion detection. The setup steps of schedule are the same as the motion detection schedule settings (See Motion Detection section for details).
- 6) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.

- **Configuration requirements of camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to Configuration requirements of camera and surrounding area of line crossing detection for details.

### 3.4.4. Region Entrance

**Region Entrance:** Alarms will be triggered if the target enters the pre-defined areas.

Go to **Config**→**Event**→**Region Entrance** interface.

- 1) Enable region entrance detection and select the snapshot type and the detection target.
- 2) Set the alarm holding time.
- 3) Set alarm areas and target size filter for region entrance detection.
- 4) Set the schedule of region entrance detection.
- 5) Set the alarm linkage items.

The setup steps of the region entrance detection are the same as the region intrusion detection setup (See Region Intrusion for details).

### 3.4.5. Region Exiting

**Region Exiting:** Alarms will be triggered if the target exits from the pre-defined areas.

Go to **Config**→**Event**→**Region Exiting** interface.

- 1) Enable region exiting detection and select the snapshot type and the detection target.
- 2) Set the alarm holding time.
- 3) Set alarm areas and target size filter for region exiting detection.
- 4) Set the schedule of region exiting detection.
- 5) Set the alarm linkage items.

The setup steps of the region exiting detection are the same as the region intrusion detection setup (See Region Intrusion for details).

### 3.4.6. Target Counting by Line

This function is used to detect, track and count the number of people or vehicles crossing the set alarm line.

- 1) Go to **Config**→**Event**→**Target Counting by Line** as shown below.

Detection Config
Schedule
Linkage

Enable

Save Original Picture To SD Card

Save Target Picture To SD Card

Detection target and sensitivity

Target	Sensitivity	Staying Threshold
<input checked="" type="checkbox"/> Human	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 50%; transform: translate(-50%, -50%); border-left: 1px solid #ccc; border-right: 1px solid #ccc; width: 10px; height: 10px; border-radius: 50%;"></div> </div> <div style="border: 1px solid #ccc; width: 40px; text-align: center; margin-left: 5px;">50</div> </div>	<input style="width: 100%;" type="text" value="0"/>
<input checked="" type="checkbox"/> Motor Vehicle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 50%; transform: translate(-50%, -50%); border-left: 1px solid #ccc; border-right: 1px solid #ccc; width: 10px; height: 10px; border-radius: 50%;"></div> </div> <div style="border: 1px solid #ccc; width: 40px; text-align: center; margin-left: 5px;">50</div> </div>	<input style="width: 100%;" type="text" value="0"/>
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid #ccc; position: relative;"> <div style="position: absolute; left: 50%; transform: translate(-50%, -50%); border-left: 1px solid #ccc; border-right: 1px solid #ccc; width: 10px; height: 10px; border-radius: 50%;"></div> </div> <div style="border: 1px solid #ccc; width: 40px; text-align: center; margin-left: 5px;">50</div> </div>	<input style="width: 100%;" type="text" value="0"/>

Push target trajectory with a persistent connection

Close Event Snapshot

Counting Reset

Timing

Off
▼

Manual

Reset

Alarm Delay Time

Second

Alarm Holding Time

- 2) Enable target counting by line and select the snapshot type and the detection target.


- **Detection Target:** Select the target to calculate. Human, motor vehicle and motorcycle/bicycle can be selected.
- **Staying Threshold:** When the targets (human/vehicle) staying in the specified area exceed the threshold, alarms will be triggered.
- **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering target counting by line.
- **Close Event Snapshot:** if enabled, the captured pictures based on target counting by line will be neither saved to an SD card/local PC nor pushed to the NVR/APP/platform/....

Revision 1.0

www.pumatronix.com

57

- **Counting Reset:** The current number of the target counting can be reset. You can choose to reset the counting daily, weekly or monthly. Click "Reset" to manually reset the current number of crossing line people/motor vehicle/non-motor vehicle counting.
  - **Alarm Delay Time:** The duration time that the number of targets exceeds the staying threshold. Alarms will not be triggered even if the targets staying in the specified area exceed the threshold within the set delay alarm duration. But if you set it to "0", alarms will be triggered immediately when the targets staying in the specified area exceed the threshold.
- 3) Set the alarm holding time.
- **Alarm Holding Time:** it is the time that the alarm extends for after an alarm ends.
- 4) Set alarm lines and target size filter.

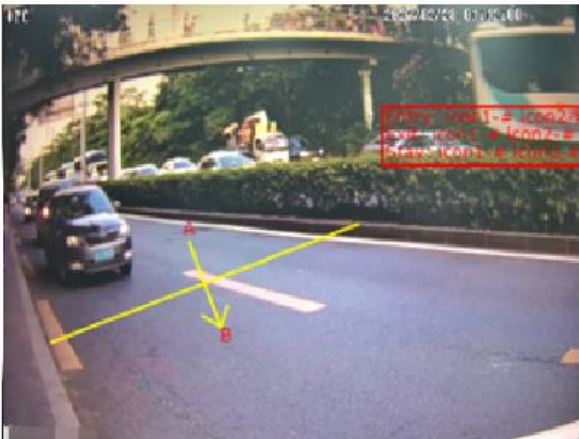

Draw Area
Clear
Draw Target Size

**Alarm Line**

Alarm Line	1	▼
Direction	A->B	▼

**Target Size Filter**

Target	Human ▼	
Min Size Width	1	%
Height	1	%
Max Size Width	90	%
Height	90	%

**OSD**

<input checked="" type="checkbox"/> Statistics	<b>Tips</b>
<input checked="" type="checkbox"/> Entrance	Entry
<input checked="" type="checkbox"/> Exit	Exit
<input checked="" type="checkbox"/> Stay	Stay
Under Threshold	Welcome
Over Threshold	Please wait

Set the alarm line number and direction. Only one alarm line can be added.

- **Direction** : A->B and A<-B can be optional. The direction of the arrow is entrance.

Click the "Draw Area" button and then drag the mouse to draw a line in the image. Click the "Clear" button to delete the lines.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).
- **Statistics:** If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface.

Check "Statistics" and then move the red box to change the position of the statistical information displayed on the screen.

The statistical OSD information can be customized as needed.

**Note:** When target counting by line and by area are enabled simultaneously, the OSD position shown in the image depends on the OSD position of target counting by area.

Click the "Save" button to save the settings.

- 5) Set the schedule of target counting by line. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
- 6) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.
- 7) View the statistical information in the live view interface.




- 8) View the statistical information of target counting by line. Click "Statistics" to enter the following interface.

Target Counting by Line				
Index	Count Time	Human	Motor Vehicle	Motorcycle/Bicycle
1	2023/12/11 00:00:00 - 2023/12/11 00:59:59	0	0	0
2	2023/12/11 01:00:00 - 2023/12/11 01:59:59	11	0	0
3	2023/12/11 02:00:00 - 2023/12/11 02:59:59	0	0	0

Select the report type. Daily report, weekly report, monthly report and annual report are selectable.

Select the count type. Enter or leave can be optional.

Select the start time and then click "Count". Then the counting result will display in the statistic result area. Click Table or Chart to display the result in different way.

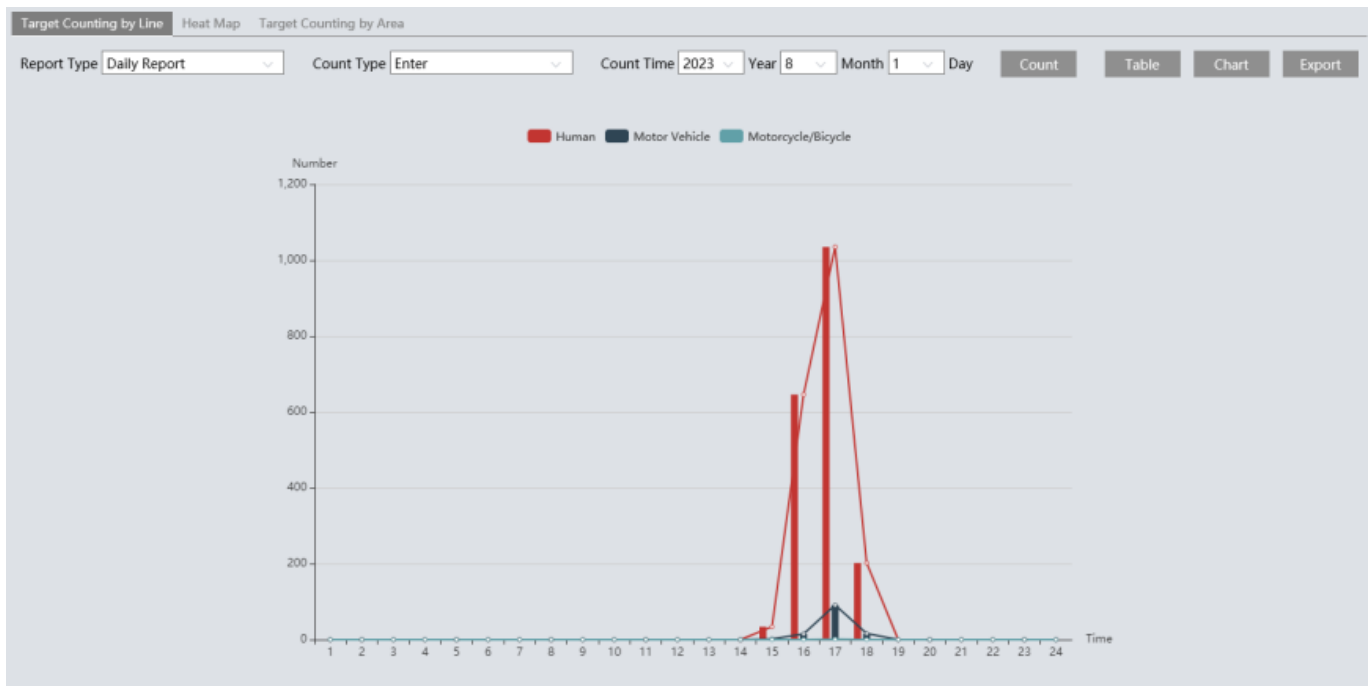


- **Configuration requirements of camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to Configuration requirements of camera and surrounding area of line crossing detection for details.

### 3.4.7. Target Counting by Area

This function is only available for some models. This function is used to detect, track and count the number of people or vehicles intruding into a pre-defined area.

- 1) Go to **Config→Event→Target Counting by Area** as shown below.

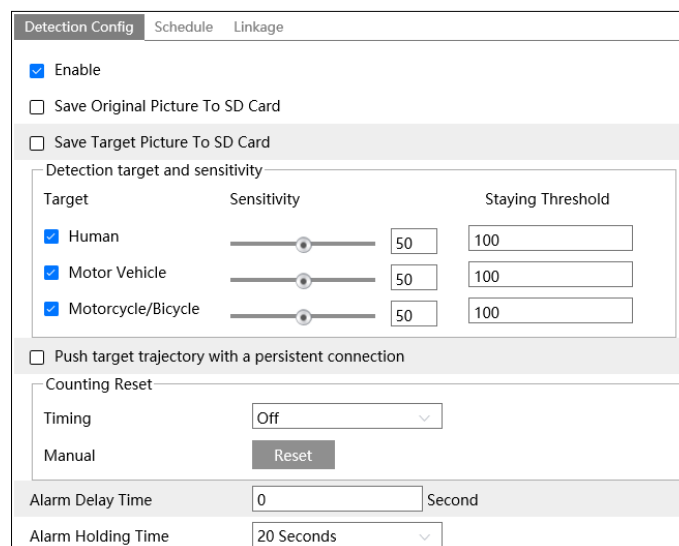

**Detection Config** | Schedule | Linkage

Enable

Save Original Picture To SD Card

Save Target Picture To SD Card

Detection target and sensitivity

Target	Sensitivity	Staying Threshold
<input checked="" type="checkbox"/> Human	50	100
<input checked="" type="checkbox"/> Motor Vehicle	50	100
<input checked="" type="checkbox"/> Motorcycle/Bicycle	50	100

Push target trajectory with a persistent connection

Counting Reset


Timing: Off

Manual:

Alarm Delay Time: 0 Second

Alarm Holding Time: 20 Seconds

- 2) Enable target counting by area, select the snapshot type, the detection target and counting reset. The setup steps are the same as the target counting by line.
- 3) Set the statistic area.

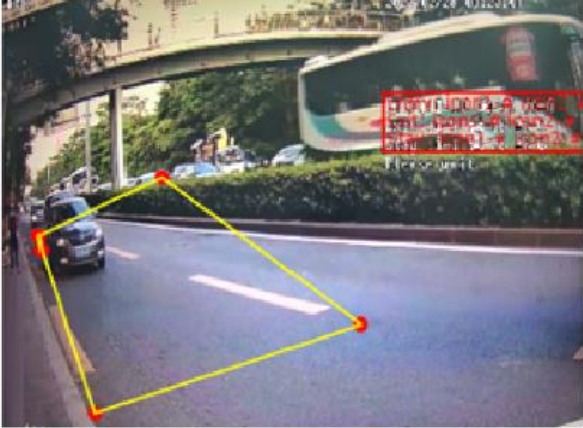

Draw Area
Clear
Draw Target Size

**Alarm Area**

Alarm Area 1 ▾

**Target Size Filter**

Target Human ▾  
 Min Size Width  %      Height  %  
 Max Size Width  %      Height  %

**OSD**

<input checked="" type="checkbox"/> Statistics	<b>Tips</b>
<input checked="" type="checkbox"/> Entrance	<input type="text" value="Entry"/>
<input checked="" type="checkbox"/> Exit	<input type="text" value="Exit"/>
<input checked="" type="checkbox"/> Stay	<input type="text" value="Stay"/>
Under Threshold	<input type="text" value="Welcome"/>
Over Threshold	<input type="text" value="Please wait"/>

Select the alarm area number. Only one alarm area can be added.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).
- **Statistics:** If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface.


Check "Statistics" and then move the red box to change the position of the statistical information displayed on the screen.

The statistical OSD information can be customized as needed.

- 4) Set the schedule of target counting by area. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
- 5) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.
- 6) View the statistical information in the live view interface.



**Note:** When target counting by line and by area are enabled simultaneously, the OSD position shown in the image depends on the OSD position of target counting by area.

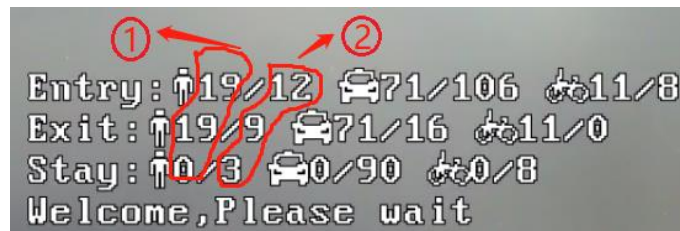

- ①: the statistical number of target counting by area
- ②: the statistical number of target counting by line

Each line of the above OSD information (including OSD content, colon, slashes and images) cannot exceed 37 characters, or some data will not be displayed completely.

- 7) View the statistical information of target counting by area. Click Statistics→Target Counting by Area to enter the following interface.

Target Counting by Line Heat Map Target Counting by Area				
Report Type	Count Type	Count Time	Count	Table Chart Export
Daily Report	Enter	2023 Year 12 Month 11 Day		
Index	Count Time	Human	Motor Vehicle	Motorcycle/Bicycle
1	2023/12/11 00:00:00 ~ 2023/12/11 00:59:59	59	9	0
2	2023/12/11 01:00:00 ~ 2023/12/11 01:59:59	0	0	0

Please select report type, count type and start time as needed. Then click "Count" to search the statistic result. Click "Chart" to view the statistic result intuitively.

- **Configuration requirements of camera and surrounding area**

The requirements are similar to line crossing detection. Please refer to Configuration requirements of camera and surrounding area of line crossing detection for details.

### 3.4.8. Heat Map

Heat Map is to display the flow distribution of people/vehicles in pre-defined areas by different colors.


- 1) Enable heat map, set snapshot type and detection target type as needed.
- 2) Set heat map display area and target size filter. Up to 4 areas can be set.

Detection Config
Schedule

Enable

Detection target and sensitivity

Target	Sensitivity
<input checked="" type="checkbox"/> Human	<input type="range" value="50"/> 50
<input checked="" type="checkbox"/> Motor Vehicle	<input type="range" value="50"/> 50
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<input type="range" value="50"/> 50

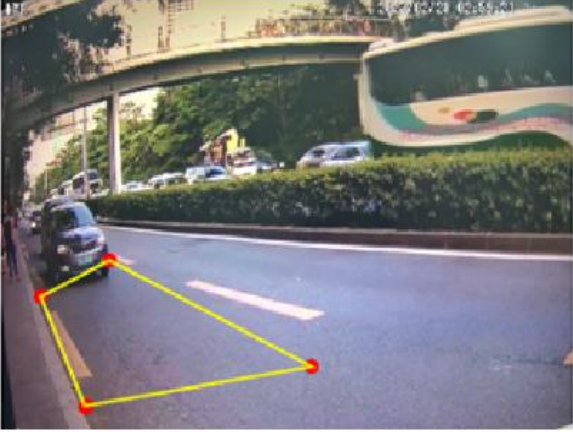

Alarm Area

Alarm Area 1

Target Size Filter

Target	<span style="border: 1px solid gray; padding: 2px 10px;">Human</span>	
Min Size Width	<span style="border: 1px solid gray; padding: 2px 10px;">1</span> %	Height <span style="border: 1px solid gray; padding: 2px 10px;">1</span> %
Max Size Width	<span style="border: 1px solid gray; padding: 2px 10px;">90</span> %	Height <span style="border: 1px solid gray; padding: 2px 10px;">90</span> %

Draw Area
Clear
Draw Target Size

Save

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).
- 3) Set the schedule of heat map. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
  - 4) View the heat map data (click **Chart→Heat Map**). Set the start time and the end time. Click "Count" to view the heat map as shown below. The default heat map is people flow data display. Click "Motor Vehicle" or "Motorcycle/bicycle" to view the corresponding data.





### 3.4.9. Loitering Detection

Loitering Detection: when someone entering and loitering in a pre-defined area exceeds the threshold, alarms will be triggered until the object leaves this area.

Go to **Event→Loitering Detection** interface as shown below. The setting steps are as follows:

- 1) Enable loitering detection and select the snapshot type.
  - **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering loitering detection alarm.

Detection Config
Schedule
Linkage

Enable

Save Original Picture To SD Card


Save Target Picture To SD Card

Push target trajectory with a persistent connection

Sensitivity

Time Threshold  Second

Alarm Holding Time



Draw Area
Clear
Draw Target Size

Save

**Alarm Area**

**Target Size Filter**

<b>Target</b>	<input style="width: 100%; border: 1px solid gray;" type="text" value="Human"/>	
<b>Min Size Width</b>	<input style="width: 40px; border: 1px solid gray;" type="text" value="1"/> %	<b>Height</b> <input style="width: 40px; border: 1px solid gray;" type="text" value="1"/> %
<b>Max Size Width</b>	<input style="width: 40px; border: 1px solid gray;" type="text" value="90"/> %	<b>Height</b> <input style="width: 40px; border: 1px solid gray;" type="text" value="90"/> %

2) Set sensitivity, time threshold and alarm holding time.

- **Sensitivity:** The higher the value is, the easier the alarm can be triggered.
- **Time Threshold:** the time that a person is allowed to stay in the area. If a person staying and moving in the specified area exceeds the threshold, alarms will be triggered until this person leaves or stops moving.
- **For example:** Set the threshold to "60seconds; when a person staying and moving in the specified area exceeds 60seconds, an alarm is triggered and continues. 2 minutes later, this person stops moving in the specified area, and then the alarm stops. However, the alarm will continue once this person moves again in the specified area unless the person leaves this area.
- **Alarm Holding Time:** it is the time that the alarm extends for after an alarm ends.

3) Set alarm areas and target size filter.

Select the alarm area number. Four alarm areas can be added.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).

- 4) Set the schedule of loitering detection. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
- 5) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.

- **Configuration requirements of camera and surrounding area**

- 1) Avoid enabling this function in complex scenes, such as a scene with a large flow of people and vehicles.
- 2) Other requirements are similar to line crossing detection. Please refer to Configuration requirements of camera and surrounding area of line crossing detection for details.

### 3.4.10. Illegal Parking Detection

Illegal Parking Detection: when a vehicle (like a car, truck, motorcycle, etc.) staying in a no-parking zone exceeds the threshold, alarms will be triggered until the vehicle is driven away.

Go to **Event→Illegal Parking Detection**. The setting steps are as follows:

- 1) Enable illegal parking detection and select the snapshot type.

Detection Config
Schedule
Linkage

Enable  
 Save Original Picture To SD Card  
 Save Target Picture To SD Card


Detection target and sensitivity

Target	Sensitivity	
<input checked="" type="checkbox"/> Motor Vehicle	<input type="range" value="50"/>	50
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<input type="range" value="50"/>	50

Push target trajectory with a persistent connection

Time Threshold  Second

Alarm Holding Time



Draw Area
Clear
Draw Target Size

Alarm Area

Alarm Area

Target Size Filter

Target	<input style="width: 80px;" type="text" value="Motor Vehicle"/>	
Min Size Width	<input style="width: 40px;" type="text" value="1"/> %	Height <input style="width: 40px;" type="text" value="1"/> %
Max Size Width	<input style="width: 40px;" type="text" value="90"/> %	Height <input style="width: 40px;" type="text" value="90"/> %

- 2) Set the detection target, sensitivity, time threshold and alarm holding time.
  - **Motor Vehicle:** a vehicle with four or more wheels
  - **Motorcycle/Bicycle Vehicle:** a vehicle with two wheels (eg. a motorcycle or bicycle)
  - **Sensitivity:** the higher the value is, the easier the alarm can be triggered.
  - **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering illegal parking alarm.
  - **Time Threshold:** the time that a vehicle is allowed to stay in the specified area. If a vehicle staying in the area exceeds the threshold, alarms will be triggered until it is driven away. For example, the time threshold is set to 30s. When the system detects a vehicle stopping in the set no-parking zone, it will start counting. Alarms will be triggered after it stays for more than 30s. And the illegal parking alarm will not stop until the vehicle is driven away from the non-parking zone.
  - **Alarm Holding Time:** it is the time that the alarm extends for after the overstaying vehicle leaves.

- 3) Set alarm areas and target size filter.

Select the alarm area number. Four alarm areas can be added.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See Line Crossing for details).
  - 4) Set the schedule of loitering detection. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
  - 5) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.
- 
- **Configuration requirements of camera and surrounding area**
    - 1) Avoid enabling this function in complex scenes, such as the scene with a large flow of people and vehicles.
    - 2) Other requirements are similar to line crossing detection. Please refer to Configuration requirements of camera and surrounding area of line crossing detection for details.

### 3.4.11. Video Metadata

**Video Metadata:** Human, motor vehicle and motorcycle/bicycle in the video can be classified and captured and the relevant features can be extracted and displayed on the live interface.

Go to **Config→Event→Video Metadata** interface. The setting steps are as follows:


Detection Config
Image OSD
Schedule
Linkage

Enable  
 Save Original Picture To SD Card  
 Save Target Picture To SD Card

Detection target and sensitivity
 

Target	Sensitivity
<input checked="" type="checkbox"/> Human	<input style="width: 100px;" type="range"/> <input style="width: 40px; text-align: center; border: 1px solid #ccc;" type="text" value="50"/>
<input checked="" type="checkbox"/> Motor Vehicle	<input style="width: 100px;" type="range"/> <input style="width: 40px; text-align: center; border: 1px solid #ccc;" type="text" value="50"/>
<input checked="" type="checkbox"/> Motorcycle/Bicycle	<input style="width: 100px;" type="range"/> <input style="width: 40px; text-align: center; border: 1px solid #ccc;" type="text" value="50"/>

Push target trajectory with a persistent connection



Draw Area
Clear
Draw Target Size

Alarm Area
 

Detection Area	<input style="width: 60px;" type="text" value="1"/>	<input checked="" type="checkbox"/>
Blocked Area	<input style="width: 60px;" type="text" value="1"/>	<input type="checkbox"/>

Target Size Filter
 

Target	<input style="width: 80px;" type="text" value="Human"/>	
Min Size Width	<input style="width: 30px;" type="text" value="1"/> %	Height <input style="width: 30px;" type="text" value="1"/> %
Max Size Width	<input style="width: 30px;" type="text" value="90"/> %	Height <input style="width: 30px;" type="text" value="90"/> %

Save

- 1) Enable video metadata and select the snapshot type and the detection target.
  - **Save Original Picture to SD Card:** If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets enter the pre-defined areas.
  - **Save Target Picture to SD Card:** If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets enter the pre-defined areas.
  - **Detection target:** Human, motor vehicle and motorcycle/bicycle. All of the three types of objects can be selected simultaneously.
  - **Push target trajectory with a persistent connection:** Push target trajectory (moving coordinate) to API test tool with a persistent connection. If enabled, the system will push the target trajectory upon detecting a target. If disabled, the system will push the target trajectory only when triggering video metadata alarm.
- 2) Set the detection area, blocked area and target size filter.
  - **Detection Area:** 4 detection areas can be set. Targets that enter the pre-defined detection area will be captured.
  - **Blocked Area:** 4 blocked areas can be set. Targets that enter the pre-defined blocked area will not be captured.

You need to set the detection area and blocked area separately.

- **To set detection area:**

Check the checkbox of detection area and select the number and to set the detection area.

Click the "Draw Area" button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the "Clear" button to delete the alarm area. Click the "Save" button to save the settings.

- **To set blocked area:**

Check the checkbox of blocked area and select the number and to set the blocked area. The setting steps are the same as detection area settings.

- **Target size filter setup:** The setup steps of the target size filter are the same as line crossing target size filter setup (See [Line Crossing](#) for details).
- 3) Select the attribute information of the target. Click "Image OSD" and then select the relevant attribute information. When the target is detected, the information you select will be displayed in the attribute display area. See Video Metadata View for details.
  - 4) Set the schedule of video metadata function. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
  - 5) Click "Linkage" to check "FTP" as needed.

After all settings above are configured, return to the live interface to view the captured pictures and features.

- **Video Metadata View**


In the live interface, click  to view the following smart snapshots.




Human information will be shown on the right panel.

Motor vehicle and motorcycle/bicycle information will be shown on the left panel.

Click the captured human picture to view the detailed information as shown below.

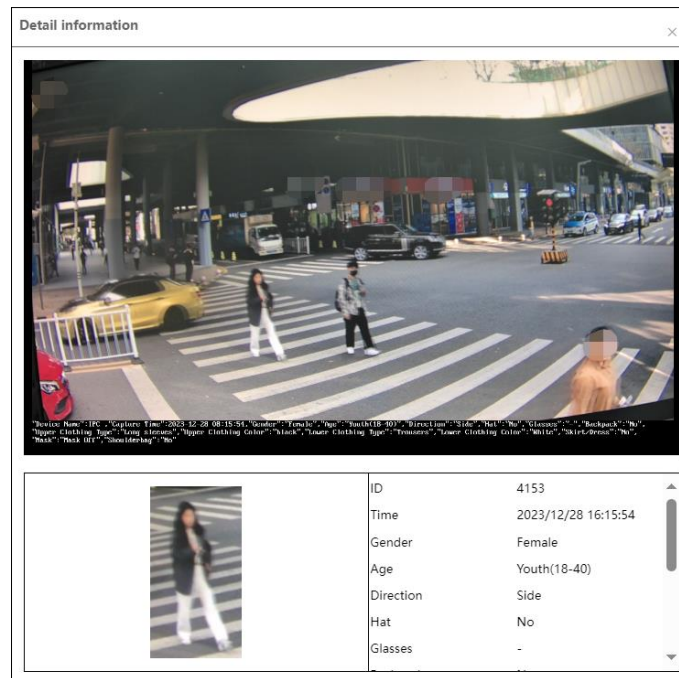

Click the captured vehicle picture to view the detailed information as shown below.

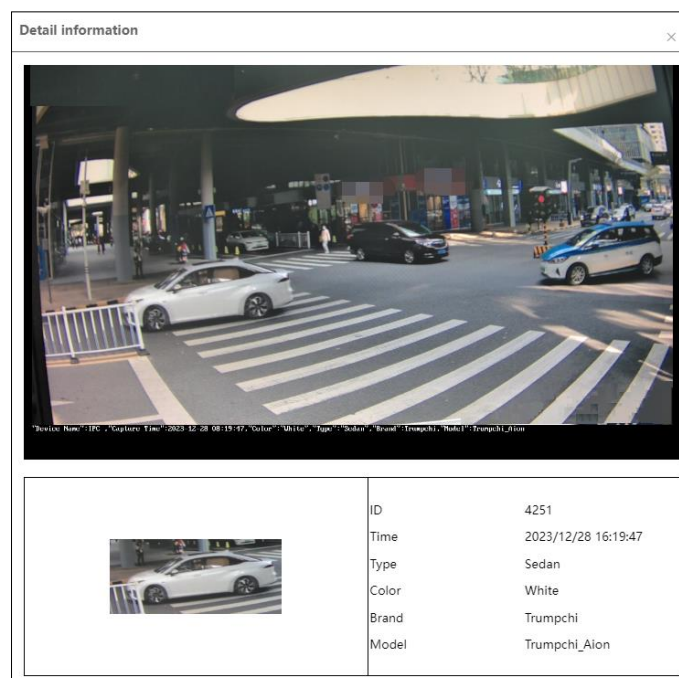

**Note:** This function is not applicable to the scene with a large flow of people and vehicles.

### 3.4.12. Face Detection

Face detection function is to detect the face appearing in the surveillance scene. Alarms will be triggered when a face is detected.

Click **Config**→**System**→**Application Scenarios**. Select the face event and then save the setting. After the camera restarts successfully, you can view the face detection menu.

The setting steps are as follows:



1) Go to Config→Event→Face Detection as shown below.

Detection Config
Advanced
Schedule
Linkage

State Working


Enable

Save Source Information To SD Card

Save Face Information To SD Card

Trigger alarm condition All Alarm

Alarm Holding Time 20 Seconds



Draw Area
Clear

Min Size 5 %

Max Size 50 %

Save

2) Enable the face detection function.

Save Source Information to SD Card: if checked, the whole picture will be saved to SD card when detecting a face.

Save Face Information to SD Card: if checked, the captured face picture will be saved to SD card when detecting a face.

**Note:** To save images to the local PC, please enable the local smart snapshot storage first (**Config→System→Local Config**). To save images to the SD card, please install an SD card first.

3) Set alarm condition and the alarm holding time.

- **Trigger alarm condition:** all or mask off can be selectable.
- **All:** Alarms will be triggered when the camera detects a face (with/without a mask).
- **Mask off:** Alarms will be triggered when the detected person is not wearing a mask on the face.

4) Set alarm detection area.

Click "Draw Area" and drag the border lines of the rectangle to modify its size. Move the rectangle to change its position. Click "Stop Draw" to stop drawing the area. Click "Clear" to clear the area. Then set the

detectable face size by defining the maximum value and the minimum value (The default size range of a single face image occupies from 3% to 50% of the entire image).

- 5) Advanced settings. Choose the snapshot interval and number as needed to avoid capturing multiple similar pictures in a very short period of time.


Detection Config	Advanced	Schedule	Linkage
Deduplication Period			
Deduplication Period	30 Seconds		
Snapshot Number	3 <input checked="" type="checkbox"/>		


**Deduplication Period:** If 30 seconds is selected, the camera will capture the same target once every 30 seconds during its continuous tracking period.

**Snapshot Number:** If the snapshot number is enabled and set (eg. 3), the camera will capture the same target once every 30 seconds and it will capture this target 3 times at most during its continuous tracking period. If the snapshot number is disabled, the camera will capture the same target once every 30 seconds until the target disappears in the detected area.

- 6) Set the schedule of the face detection. The setup steps of the schedule are the same as schedule recording setup (See Schedule Recording).
- 7) Click "Linkage" to configure the alarm linkage items. The setup steps are the same as motion detection. Please refer to Alarm In section for details.

- **Face Capture View**


After enabling face detection function, return to the live view interface. Click  to go to the following interface. When there are faces detected, the face pictures will be listed on the right. The features of captured faces also can be displayed, such as gender, whether to wear a mask, whether to wear glasses, age group, etc.

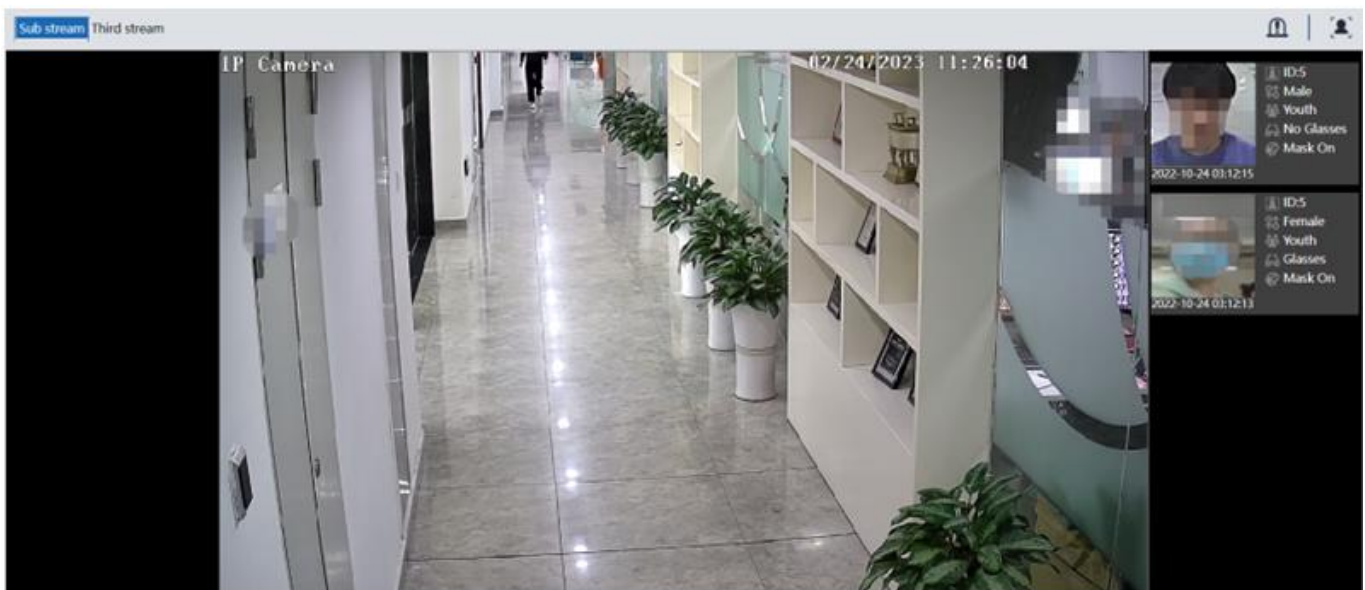

- **Configuration requirements of camera and surrounding area**

- 1) Cameras must be installed in the area with stable and adequate light sources.

- 2) The installation height ranges from 2.0m to 3.5m, adjustable according to the focal-length of different lenses and object distances.
- 3) The depression angle of the camera shall be less than or equal to 15°.

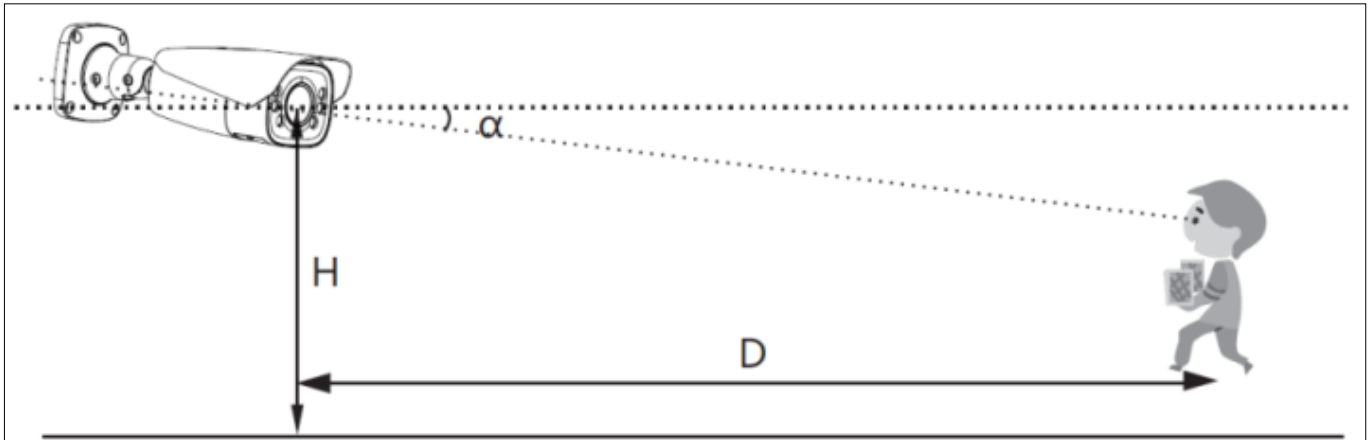

- 4) The object distance depends on the focal-length of the lens mounted in the camera.
- 5) In order to guarantee the captured face recognition rate, the requirement for face capture are: left or right turn angle is less than about 30°; pitching angle is less than 20°.
- 6) Face illumination must be uniform, if the brightness is low or there is a large area of shadow, need to do the light filling.
- 7) When the capture scenario is backlight, the camera's BLC/HLC/WDR need to be turned on, or fill the light.
- 8) The following scenes are not applicable, like crowded scenes (airport, railway station, square, etc), and so on.

## 3.5. Network Configuration

### 3.5.1. TCP/IP


Go to **Config**→**Network**→**TCP/IP** interface as shown below. There are two ways for network connection.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	<input type="text" value="192.168.226.201"/>	<input type="button" value="Test"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>		
Gateway	<input type="text" value="192.168.226.1"/>		
Preferred DNS Server	<input type="text" value="192.168.226.1"/>		
Alternate DNS Server	<input type="text" value="8.8.8.8"/>		
<input type="button" value="Save"/>			

- **Use IP address (take IPv4 for example)**-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.


Test: Test the effectiveness of the IP address by clicking this button.

- **Use PPPoE**-Click the "PPPoE Config" tab to go to the interface as shown below. Click "Edit", enable PPPoE and then enter the user name and password from your ISP.

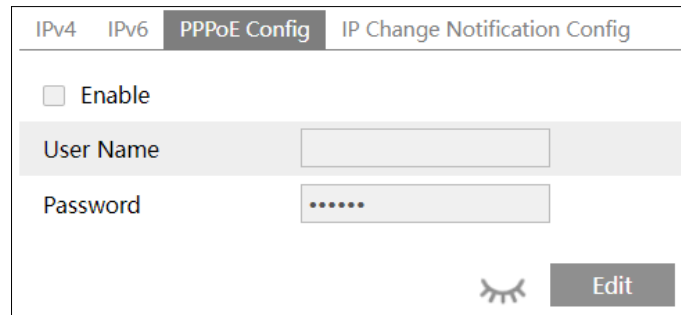

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.


Click "IP Change Notification Config" to go to the interface as shown below.

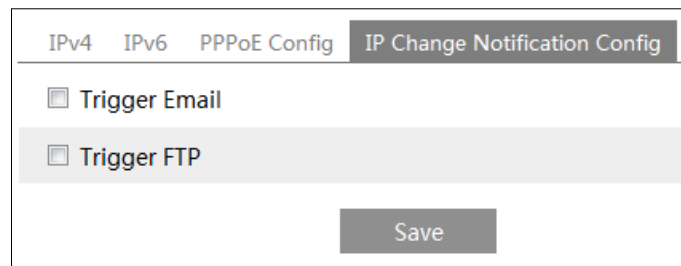

- **Trigger Email:** when the IP address of the camera is changed, the new IP address will be sent to the email address that has been set up.
- **Trigger FTP:** when the IP address of the camera is changed, the new IP address will be sent to FTP server that has been set up.

### 3.5.2. Port

Go to **Config**→**Network**→**Port** interface as shown below. HTTP port, Data port and RTSP port can be set.

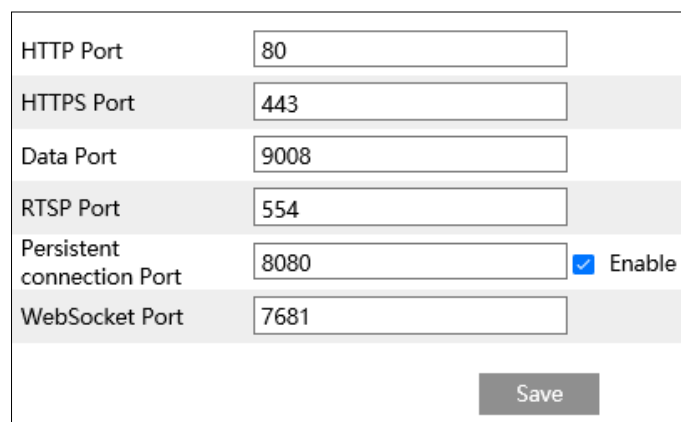

- **HTTP Port:** The default HTTP port is 80. It can be changed to any port which is not occupied.
- **HTTPS Port:** The default HTTPS port is 443. It can be changed to any port which is not occupied.

- **Data Port:** The default data port is 9008. Please change it as necessary.
- **RTSP Port:** The default port is 554. Please change it as necessary.
- **Persistent Connection Port:** The port is used for a persistent connection of the third-party platform to push smart data, like face pictures.
- **WebSocket Port:** Communication protocol port for plug-in free preview.

### 3.5.3. Server Configuration

This function is mainly used for connecting network video management system.

<input type="checkbox"/> Enable	
Server Port	<input type="text" value="2009"/>
Server Address	<input type="text"/>
Device ID	<input type="text" value="1"/>
 <input type="button" value="Edit"/>	


- 1) Click "Edit" and then check "Enable".
- 2) Check the IP address and port of the transfer media server in the NVMS. Then enable the auto report in the NVMS when adding a new camera. Next, enter the remaining information of the camera in the NVMS. After that, the system will automatically allot a device ID. Please check it in the NVMS.
- 3) Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the "Save" button to save the settings. You can show or hide the sensitive data as needed.

### 3.5.4. Onvif

The camera can be searched and connected to the third-party platform via ONVIF/RTSP protocol.

If "Activate Onvif User" is enabled in the camera activation interface, the password of ONVIF admin user can be modified simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use this onvif user to connect.

You can also modify the password of admin sperately in the following interface and add new users in the Onvif interface.

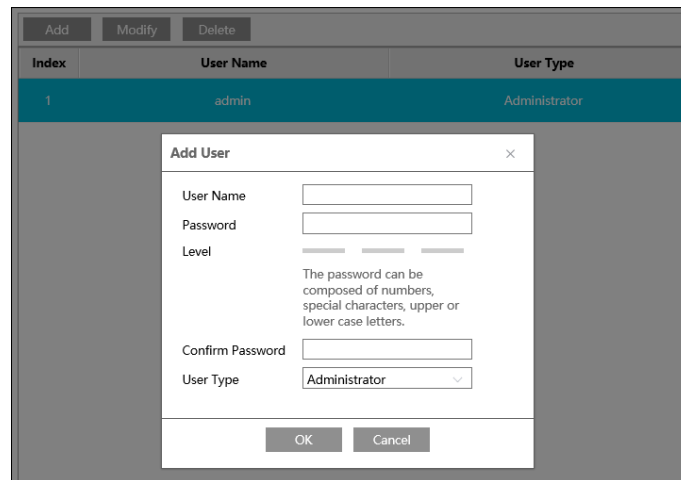

Index	User Name	User Type
1	admin	Administrator

**Add User** [X]

User Name:

Password:

Level:

The password can be composed of numbers, special characters, upper or lower case letters.

Confirm Password:

User Type:


OK Cancel

**Note:** when adding the camera to the third-party platform with ONVIF/RTSP protocol, please use the onvif user in the above interface.

### 3.5.5. DDNS

If the camera is set up with a DHCP connection, DDNS should be set for the internet.

- 1) Go to **Config**→**Network**→**DDNS**.

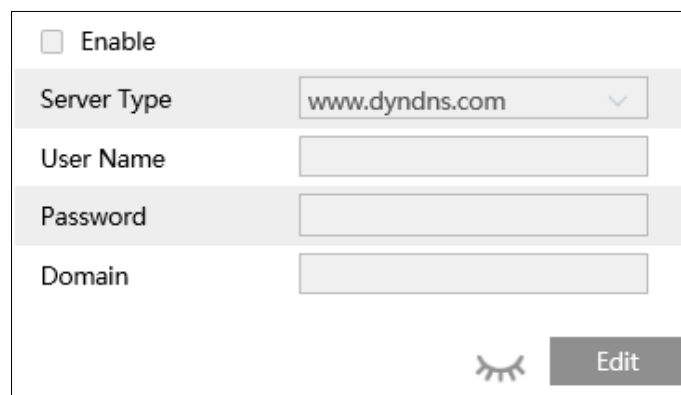

Enable

Server Type:

User Name:

 
Password:

Domain:

Edit

- 2) Apply for a domain name. Take [www.dvrdyndns.com](http://www.dvrdyndns.com) for example.

Enter [www.dvrdyndns.com](http://www.dvrdyndns.com) in the web address bar to visit its website. Then Click the "Registration" button.

NEW USER REGISTRATION	
USER NAME	<input type="text" value="XXXX"/>
PASSWORD	<input type="password" value="•••••"/> ?
PASSWORD CONFIRM	<input type="password" value="•••••"/>
FIRST NAME	<input type="text" value="XXX"/>
LAST NAME	<input type="text" value="XXX"/>
SECURITY QUESTION.	My first phone number. ▾
ANSWER	<input type="text" value="XXXXXXXX"/>
CONFIRM YOU'RE HUMAN	 New Captcha <input type="text"/> Enter the text you see above
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Create domain name.

*You must create a domain name to continue.*

Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.

dvrtdns.com ▾

After the domain name is successfully applied for, the domain name will be listed as below.

Search by Domain.

*Click a name to edit your domain settings.*

NAME	STATUS	DOMAIN
654321ABC	✔	654321abc.dvrtdns.com

Last Update: *Not yet updated* IP Address: 210.21.229.138

[Create additional domain names](#)

- 3) Click "Edit" and then enter the username, password, domain you apply for in the DDNS configuration interface.
- 4) Click the "Save" button to save the settings.

### 3.5.6. SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

- 1) Go to **Config**→**Network**→**SNMP**.

SNMP v1/v2	
<input type="checkbox"/> Enable SNMPv1	
<input type="checkbox"/> Enable SNMPv2	
Read SNMP Community	public
Write SNMP Community	private
Trap Address	192. **. *. 201
Trap Port	162
Trap community	public
SNMP v3	
<input type="checkbox"/> Enable SNMPv3	
Read User Name	public
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	●●●●●●●●
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	●●●●●●●●
Write User Name	private
Security Level	auth, priv
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	●●●●●●●●
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	●●●●●●●●
Other Settings	
SNMP Port	161
 <b>Edit</b>	


- 2) Click "Edit" and then check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.
- 3) Set the values for "Read SNMP Community", "Write SNMP Community", "Trap Address", "Trap Port" and so on. Please make sure the settings are the same as that of the SNMP software.

**Note:** Please use the different version in accordance with the security level you required. The higher the version is, the higher the level of the security is.



### 3.5.7.802.1x

If it is enabled, the camera's data can be protected. When the camera is connected to the network protected by the IEEE802.1x, user authentication is needed.

<input type="checkbox"/> Enable	
Protocol Type	EAP_MD5
EAPOL Version	1
User Name	
Password	••••••
Confirm Password	••••••
 <input type="button" value="Edit"/>	

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be regarded as an authentication system to identify the camera in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Click "Edit" to start the setup.

- **Protocol type:** Choose "EAP\_MD5" or "EAP\_TLS" as needed.


Select EAP-TLS as the EAP method. Enter your ID issued by the CA, and then upload related certificate(s). Before connecting the camera to the protected network with 802.1x, apply a digital certificate from a Certificate Authority (i.e., your network administrator) which can be validated by a RADIUS server.

Select EAP\_MD5 as the EAP method. You need to enter the username and password.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

### 3.5.8. RTSP

Go to **Config**→**Network**→**RTSP**.

<input checked="" type="checkbox"/> Enable	
Port	554
Address	rtsp://IP or domain name:port/profile1
	rtsp://IP or domain name:port/profile2
	rtsp://IP or domain name:port/profile3
Multicast address	
Main stream	239. ***. ***.0 50554 <input type="checkbox"/> Automatic start
Sub stream	239. ***. ***.1 51554 <input type="checkbox"/> Automatic start
Third stream	239. ***. ***.2 52554 <input type="checkbox"/> Automatic start
Audio	239. ***. ***.3 53554 <input type="checkbox"/> Automatic start
<input type="checkbox"/> Allow anonymous login (No username or password required)	
 <input type="button" value="Edit"/>	

Click "Edit" and then select "Enable" to enable the RTSP function.

- **Port:** Access port of the streaming media. The default number is 554.
- **RTSP Address:** The RTSP address (unicast) format that can be used to play the stream in a media player.
- **Multicast Address**
- **Main stream:** The address format is "rtsp://IP address: rtsp port/profile1?transportmode=mcast".
- **Sub stream:** The address format is "rtsp://IP address: rtsp port/profile2?transportmode=mcast".
- **Third stream:** The address format is "rtsp://IP address: rtsp port/profile3?transportmode=mcast".

**Note:** Some models may support third stream, fourth stream or fifth stream.

- **Audio:** Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If "Allow anonymous login..." is checked, there is no need to enter the username and password to view the video.

If "auto start" is enabled, the multicast received data should be added into a VLC player to play the video.

**Note:**

- 1) This camera supports local video preview through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcast) in a VLC player to realize the simultaneous video preview with the web client.
- 2) The IP address mentioned above cannot be the address of IPv6.
- 3) Avoid the use of the same multicast address in the same local network.
- 4) When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.
- 5) If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

### 3.5.9. RTMP

You can access the third-party (like YouTube) to realize video live view through RTMP protocol.

Go to **Config**→**Network**→**RTMP**.

<input type="checkbox"/> Enable
Stream Type: <input checked="" type="radio"/> Main stream <input type="radio"/> Sub stream <input type="radio"/> Third stream
Reconnect After Timeout: <input type="text" value="30"/> Second
Server Address: <input type="text" value="example: rtmp://127.***.***.1:1935/live"/>
Connection Status: <span>Not Connected</span> <input type="button" value="Refresh"/>
<input type="button" value="Edit"/>

Click "Edit" and then check "Enable", select stream type and set the reconnection time after timeout and server address as needed.

Server address: Enter the server address allocated by the third party server.

After that, click "Save" to save the settings. Then click "Refresh" to view the connection status.

### 3.5.10. UPNP

If this function is enabled, the camera can be quickly accessed through the LAN.

Go to **Config**→**Network**→**UPnP**. Enable UPnP and then enter UPnP name.

<input checked="" type="checkbox"/> Enable
UPnP Name: <input type="text"/>
<input type="button" value="Save"/>

### 3.5.11. Email


If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to **Config**→**Network** →**Email**.

Sender	
Sender Address	<input type="text"/>
User Name	<input type="text"/> <input type="checkbox"/> Anonymous Login
Password	<input type="password"/>
Server Address	<input type="text"/>
Secure Connection	Unnecessary <input type="button" value="v"/>
SMTP Port	<input type="text" value="25"/>
<input type="checkbox"/> Send Interval(S)	<input type="text" value="60"/> (10-3600)

Recipient	
<div style="border: 1px solid gray; height: 100px; width: 100%;"></div>	



Click "Edit and Test" to set the sender and the recipient.

- **Sender Address:** sender's e-mail address.
- **User name and password:** sender's user name and password (you don't have to enter the username and password if "Anonymous Login" is enabled).
- **Server Address:** The SMTP IP address or host name.

Select the secure connection type at the "Secure Connection" pull-down list according to what's required.

- **SMTP Port:** The SMTP port.
- **Send Interval(S):** The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.

Click the "Test" button to test the connection of the account.

- **Recipient Address:** receiver's e-mail address.

### 3.5.12. FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

- 1) Go to **Config**→**Network** →**FTP**.

Server Name	Server Address	Server Type	Port	User Name	Upload Path
<div style="border: 1px solid gray; padding: 10px; width: fit-content; margin: 0 auto;"> <div style="display: flex; justify-content: space-between; align-items: center;"> <span><b>Add FTP</b></span> <span>×</span> </div> <div style="margin-top: 10px;"> <p>Server Name <input type="text"/></p> <p>Server Address <input type="text"/></p> <p>Upload Path <input type="text" value="Example:/Dir/folder"/></p> <p>Port <input type="text" value="21"/></p> <p>User Name <input type="text"/> <input type="checkbox"/> Anonymous</p> <p>Password <input type="password"/> </p> <p>Server Type <input style="border: none; border-bottom: 1px solid gray;" type="text" value="FTP"/> ▾</p> <div style="display: flex; justify-content: center; gap: 20px; margin-top: 10px;"> <span>OK</span> <span>Cancel</span> </div> </div> </div>					
<div style="display: flex; justify-content: center; gap: 10px;"> <span>Add</span> <span>Modify</span> <span>Delete</span> <span>Test</span> </div> <div style="text-align: center; margin-top: 20px;"> <span>Save</span> </div>					

- 2) Click "Edit and Test" and then click "Add" to add the information of the FTP. After that, click "Save" to save the settings.
  - **Server Name:** The name of the FTP server.
  - **Server Address:** The IP address or domain name of the FTP.
  - **Upload Path:** The directory where files will be uploaded to.
  - **Port:** The port of the FTP server.
  - **User Name and Password:** The username and password that are used to login to the FTP server.
- 3) In the event setting interface (like region intrusion, line crossing, etc.), trigger FTP as shown below.

<input type="checkbox"/> Trigger Email		
<input checked="" type="checkbox"/> Trigger FTP		
Server Name	Server Address	
<input checked="" type="checkbox"/> FTP	192.***.***.3	<input type="checkbox"/> Attach Picture

Rule of FTP storage path: /device MAC address/event type/date/time/

For example: a motion alarm occurs

FTP file path : \00-18-ae-a8-da-2a\MOTION\2021-01-09\14\

Event name table:

File Name	Event Type
IP	IP address change
MOTION	Motion Detection
SENSOR	Sensor Alarm
TRIPWIRE	Line Crossing Detection
PERIMETER	Region Intrusion Detection
OSC	Object Abandoned/Missing
AVD	Video Exception
VFD	Face Detection
AOIENTRY	Region Entering
AOILEAVE	Region Exiting
PASSLINECOUNT	Target Counting by Line
TRAFFIC	Target Counting by Area
LOITER	Loitering Detection
PVD	Illegal Parking Detection
SDFULL	SD Full
SDERROR	SD Error
VSD	Video Metadata

TXT file content:

camera name: xxx mac: camera MAC address Event Type time:


For example:

camera name: IPC mac: 00-18-ae-a8-da-2a MOTION time: 2021-03-16 12:20:07

### 3.5.13. HTTP POST

Go to **Config**→**Network** →**HTTP POST** interface.

- 1) Click "Edit".
- 2) Click "Add" to add HTTP POST.

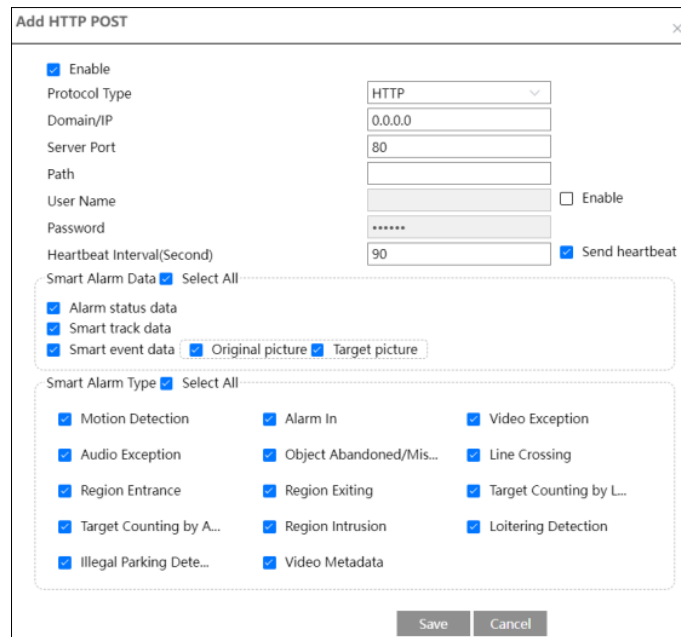

Protocol type: HTTP

Domain/IP: the IP address/domain name of the third-party platform.

Server port: the server port of the third-party platform.

Path: enter the subdomain of the above server, for example, the URL of alarm information push: `"/SendAlarmStatus"` .

Username and password: Please enable and enter as needed.


Enable "Send heartbeat" and set heartbeat interval as needed.

After the above parameters are set, click "Save" to save the settings. Select one URL and click "Test" to test the connection of the URL. Then the camera will automatically connect the third-party platform. The online state can be viewed in the above interface. After the camera is successfully connected, it will send the selected alarm data to the third-party platform once the selected smart alarm is triggered.

### 3.5.14. HTTPS


HTTPS provides authentication of the web site and protects user privacy.

Go to **Config** → **Network** → **HTTPS** as shown below.

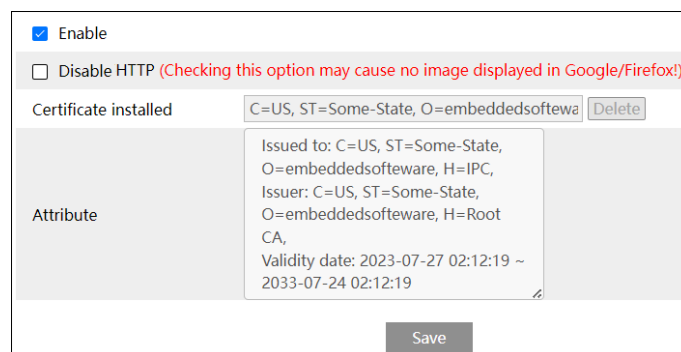


There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via a web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don't want to use the default one. Click "Delete" to cancel the default certificate. Then the following interface will be displayed.

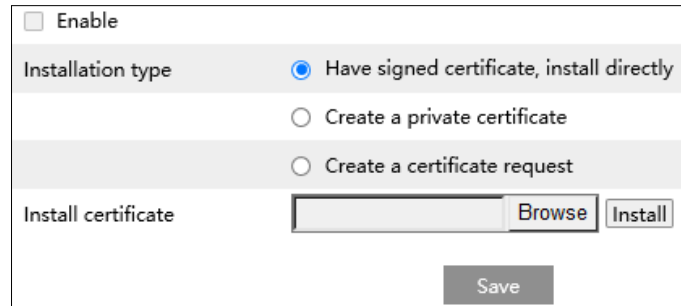


- If there is a signed certificate, click "Browse" to select it and then click "Install" to install it.
- Click "Create a private certificate" to enter the following creation interface.

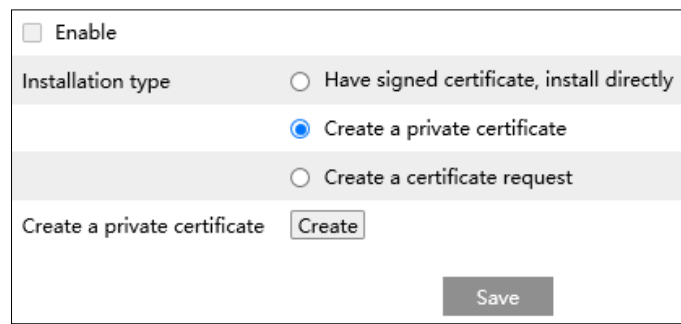

Click the "Create" button to create a private certificate. Enter the country (only two letters available), domain (camera's IP address/domain), validity date, password, province/state, region and so on. Then click "OK" to save the settings.

- Click "Create a certificate request" to enter the following interface.

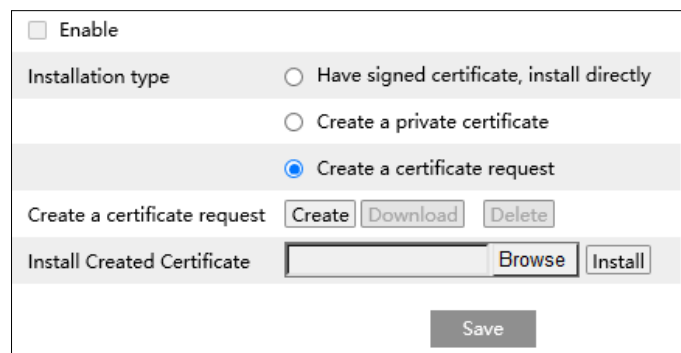

Click "Create" to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the camera.

### 3.5.15. P2P

If this function is enabled, the network camera can be quickly accessed by scanning the QR Code in mobile surveillance client via WAN. Enable this function by going to **Config**→**Network**→**P2P** interface. After this function is enabled, you can view whether it is online.



### 3.5.16. QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to **Config→Network→QoS**.

Video/Audio DSCP	<input type="text" value="13"/>
Alarm DSCP	<input type="text" value="35"/>
Manager DSCP	<input type="text" value="53"/>

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

### 3.5.17. Cloud Upgrade

**Note:** Before you use cloud upgrade, please make sure P2P is enabled successfully.

After the cloud server pushes the latest version, you can upgrade the camera by itself or NVR.

- 1) Go to Settings→Network→Cloud Upgrade.
- 2) Select "Notify Only" in the cloud upgrade options or click "Manual Check" to check whether the current version is the latest. If your software version is not the latest, click "Upgrade" to download and upgrade from the cloud server.

The cautions of the cloud upgrade are the same with the local upgrade (See Upgrade section for details).

## 3.6. Security Configuration


### 3.6.1. User Configuration

Go to **Config→Security→User** interface as shown below.

<input type="button" value="Add"/> <input type="button" value="Modify"/> <input type="button" value="Delete"/> <input type="button" value="Security Question"/>		
Index	User Name	User Type
1	admin	Administrator

- **Add user:**

- 1) Click the "Add" button to pop up the following textbox.

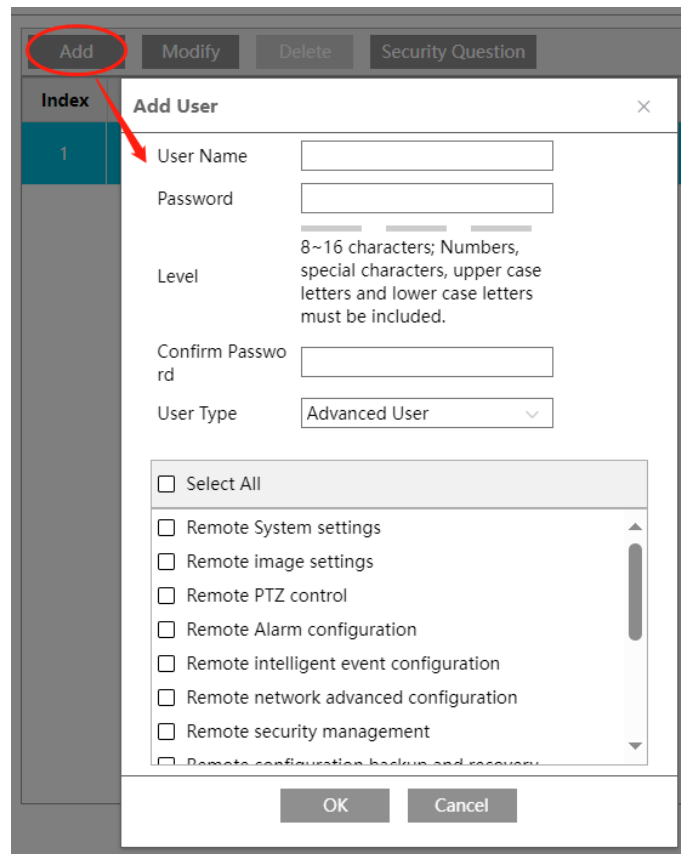

- 2) Enter user name in the "User Name" textbox.
- 3) Enter the password in the "Password" and "Confirm Password" textbox. Please set the password according to the requirement of the password security level (Go to **Config→Security→Security Management→Password Security** interface to set the security level).
- 4) Choose the user type and select the desired user permissions (Administrator, Advanced User, Normal User).
- 5) Click the "OK" button and then the newly added user will be displayed in the user list.

- **Modify user:**

- 1) Select a user to modify password if necessary in the user configuration list box.
- 2) The "Edit user" dialog box pops up by clicking the "Modify" button.

**Edit User**
✕

User Name

Old Password

New Password

8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.

Level

Confirm Password

User Type

Modify Onvif Password

Select All
 

- Remote System settings
- Remote image settings
- Remote PTZ control
- Remote Alarm configuration
- Remote intelligent event configuration
- Remote network advanced configuration
- Remote security management
- Remote configuration backup and recovery

- 3) Enter the old password of the user in the "Old Password" text box.
- 4) Enter the new password in the "New password" and "Confirm Password" text box.
- 5) Select the user permissions for advanced or normal user.
- 6) Click the "OK" button to save the settings.

- **Delete user:**

- 1) Select the user to be deleted in the user configuration list box.
- 2) Click the "Delete" button to delete the user.

**Note:** The default administrator account cannot be deleted.

- **Safety Question Settings:** set the questions and answers for admin so as to reset the password after you forget the password.

### 3.6.2. Online User


Go to **Config**→**Security**→**Online User** to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	Kick Out

An administrator user can kick out all the other users (including other administrators).

### 3.6.3. Block and Allow Lists

Go to **Config→Security→Block and Allow Lists** as shown below.

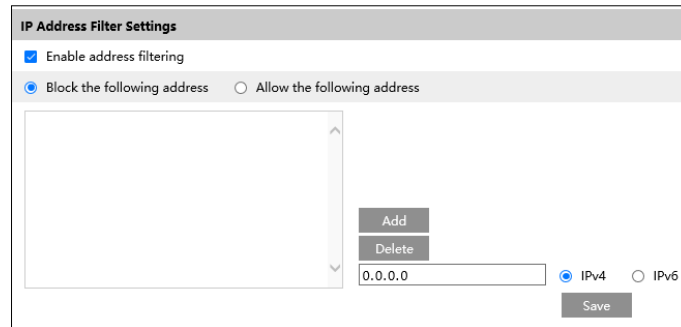


The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6 and then enter IP address in the address box and click the “Add” button.

### 3.6.4. Security Management

Go to **Config→Security→Security Management** as shown below.

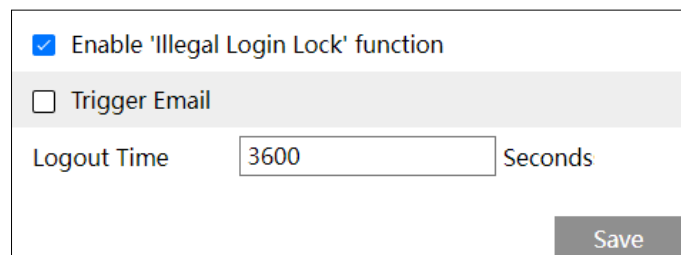

In order to prevent against malicious password unlocking, “Illegal Login Lock” function can be enabled here. If this function is enabled, login failure after trying five times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

Trigger Email: if enabled, e-mail will be sent when logging in/out or illegal login lock occurs.

- **Password Security**

Security Service	Password Security	Authentication
Password Level	<input type="text" value="Weak"/>	
Expiration Time	<input type="text" value="Never"/>	
		<input type="button" value="Save"/>

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.

Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 8~16 characters, including at least two of the following categories: numbers, special characters, upper case letters and lower case letters.

Strong Level: 8~16 characters. Numbers, special characters, upper case letters and lower case letters must be included.

For your account security, it is recommended to set a strong password and change your password regularly.


HTTP/RTSP Authentication: Basic or Token is selectable.

Security Service	Password Security	Authentication
RTSP Authentication		<input type="text" value="Basic"/>
HTTP Authentication		<input type="text" value="Basic"/>
		<input type="button" value="Save"/>

## 3.7. Maintenance Configuration

### 3.7.1. Backup and Restore

Go to **Config**→**Maintenance**→**Backup & Restore**.

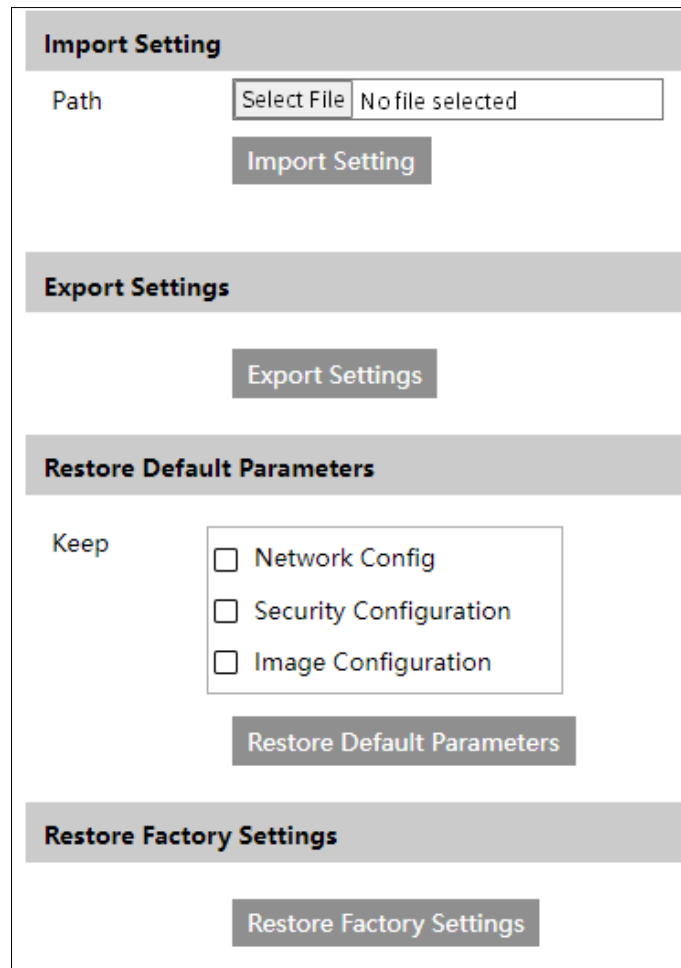

The screenshot displays a configuration interface with four main sections:

- Import Setting:** Includes a "Path" field with a "Select File" button and "No file selected" text, and an "Import Setting" button.
- Export Settings:** Includes an "Export Settings" button.
- Restore Default Parameters:** Includes a "Keep" section with three checkboxes: "Network Config", "Security Configuration", and "Image Configuration", and a "Restore Default Parameters" button.
- Restore Factory Settings:** Includes a "Restore Factory Settings" button.

- **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

- 1) Click "Browse" to select the save path for import or export information on the PC.
- 2) Click the "Import Setting" or "Export Setting" button.

**Note:** The login password needs to be entered after clicking the "Import Setting" button.

- **Restore Default Parameters**

Click the "Restore Default Parameters" button and then verify the password to restore all parameters to the default parameters except those you want to keep.

- **Restore Factory Settings**

Click the "Restore Factory Settings" button and then verify the password to restore all system settings to the default factory settings.

### 3.7.2. Reboot

Go to **Config**→**Maintenance**→**Reboot**.

Click the "Reboot" button and then enter the password to reboot the camera.

- **Scheduled Reboot Setting:**

If necessary, the camera can be set up to reboot on a time interval. Enable "Time Settings", set the date and time, click the "Save" button and then enter the password to save the settings.

### 3.7.3. Upgrade

Go to **Config→Maintenance→Upgrade**. In this interface, the camera firmware can be updated.

- 1) Click the "Browse" button to select the save path of the upgrade file
- 2) Click the "Upgrade" or "Back up and upgrade" button to start upgrading the firmware.
- 3) Enter the correct password and then the camera will restart automatically.

**Note:** If "Back up and upgrade" is selected, the configuration file will be exported to your local PC before starting upgrading.

- **Caution:**

- 1) You cannot downgrade to a lower version.
- 2) Do not refresh/close the browser or disconnect the camera from the network during the upgrade, or it will cause system failure. After the camera is successfully upgraded, there are ten minutes of observation. During this observation period, do not upgrade the camera again.

**Note:** To decrease the upgrade risk, this series of cameras adopts two systems. After one system is successfully upgraded, the other system will be synchronized. If one system fails caused by power failure or other reasons during the upgrade, the other system will not be affected and the camera still can work normally. You can also upgrade your camera through the normal system.

- **Export Upgrade Log:** If upgrade error occurs, the upgrade log can be exported to help the technician to analyze and solve the problem.

### 3.7.4. Operation Log

To query and export log:

- 1) Go to **Config→Maintenance→Operation Log**.

Main Type	<input type="text" value="Operation"/>	Sub Type	<input type="text" value="Log in"/>			
Start Time	<input type="text" value="2021-09-06 00:00:00"/>	End Time	<input type="text" value="2021-09-06 23:59:59"/>	<input type="button" value="Search"/>	<input type="button" value="Export"/>	
Index	Time	Main Type	Sub Type	User Name	Login IP	Hostname
1	2021-09-06 03:1...	Operation	Log in	admin	10.20.52.7	
2	2021-09-06 03:1...	Operation	Log in	admin	10.20.52.7	

- 2) Select the main type, sub type, start and end time.
- 3) Click "Search" to view the operation log.
- 4) Click "Export" to export the operation log.

### 3.7.5. Debug Mode

Debug Mode is used to record and collect the required system data, so that the technician can quickly find out and analyze the problem, and help us to improve service.

Before enabling the debug mode, you are advised to consult our technical support.

Open Debug Mode  
 Debug Level  v  
 If the SD card is used as a dump device, SD card related services cannot be used

**Note:** Once the SD card is used to collect the system data, the SD card will not be used to store snapshots and recorded files. Only when you disable debug mode and format the SD card in the storage interface (**Config→System→Storage→Management**) after the camera is rebooted, can the SD card be used to store snapshots and recorded files.

### 3.7.6. Maintenance Information

When the camera failure occurs, you can export the maintenance information and send it to the technicians, so that they can quickly find out and analyze the problem. Go to **Config→Maintenance Information** to export.


## 4. Search


### 4.1. Image Search

Click Search to go to the interface as shown below. Images that are saved on the SD card can be found here.


- **SD Card Image Search**

- 1) Choose "Picture".

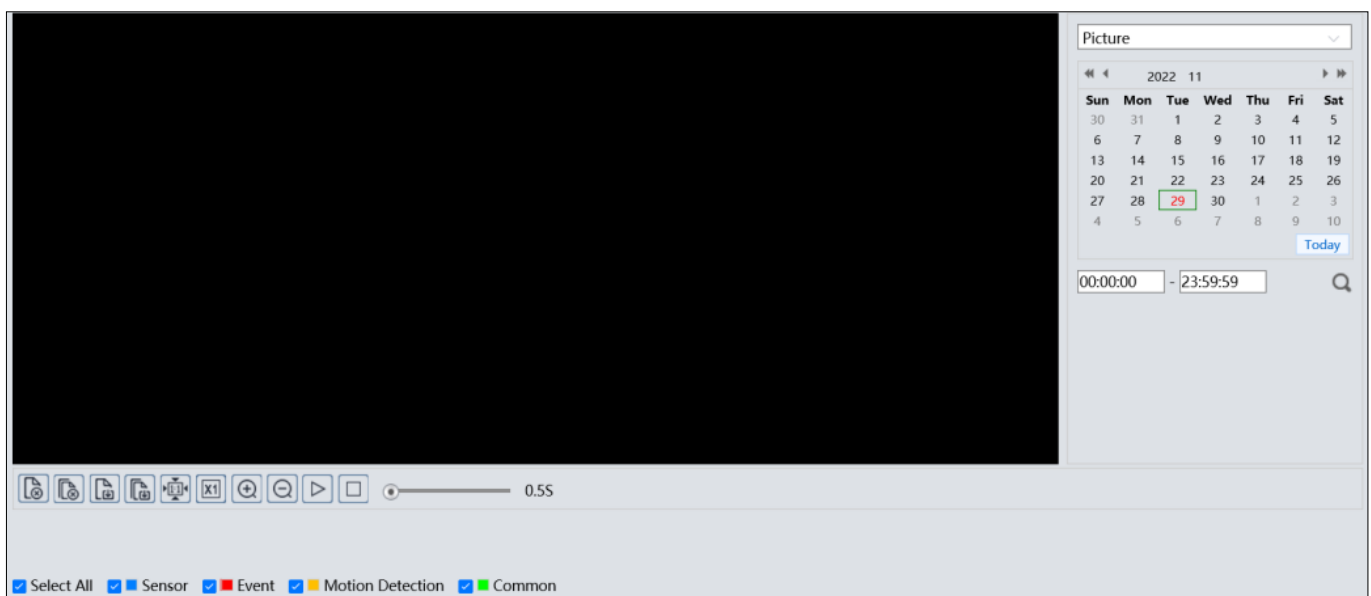





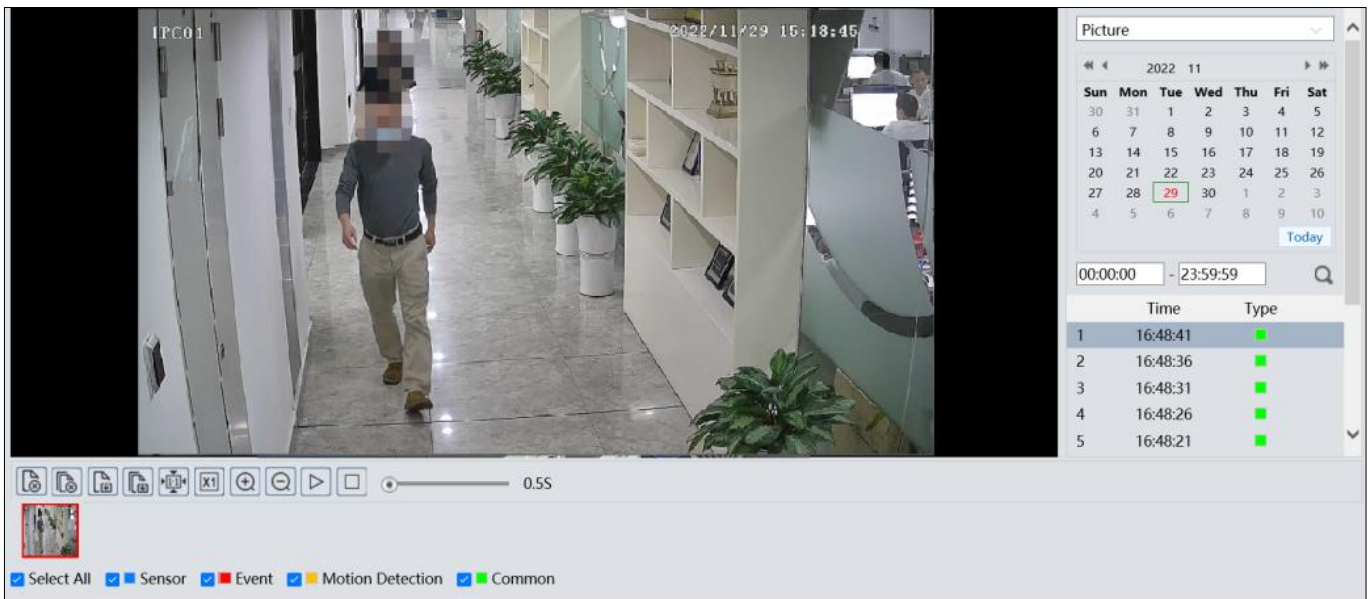






- 2) Set time: Select date and choose the start and end time.
- 3) Choose the alarm events at the bottom of the interface.
- 4) Click  to search the images.
- 5) Double click a file name in the list to view the captured photos.






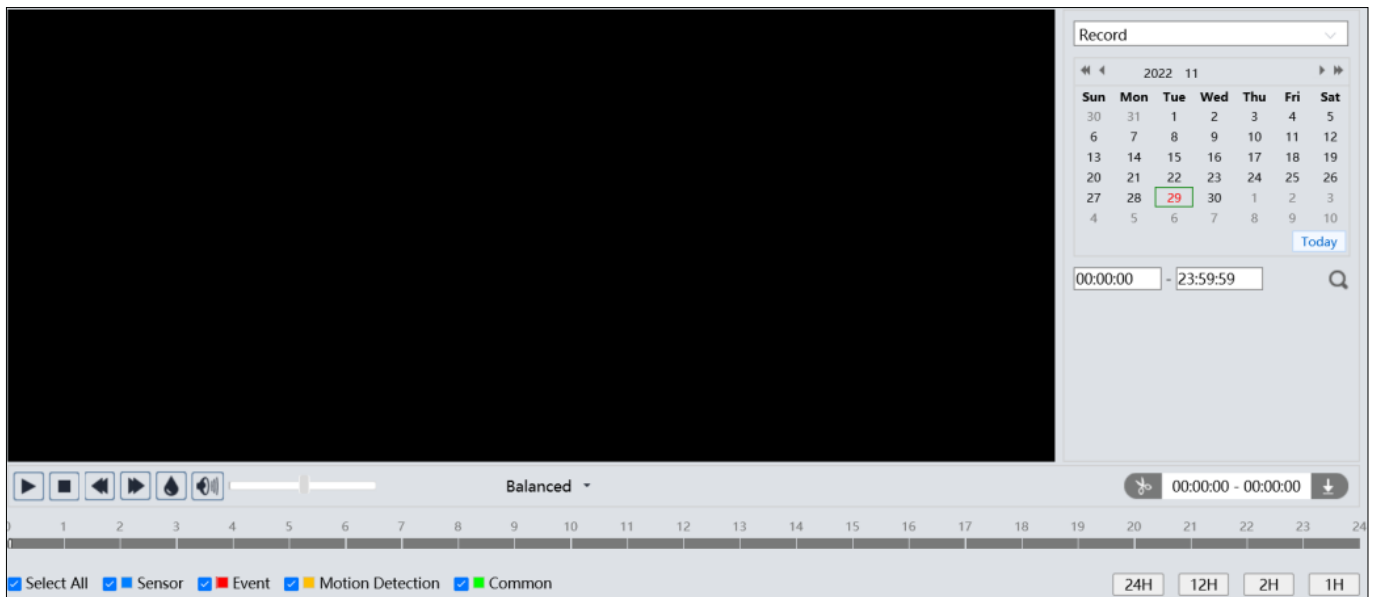
The descriptions of the buttons are shown as follows.

Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		


## 4.2. Video Search








Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

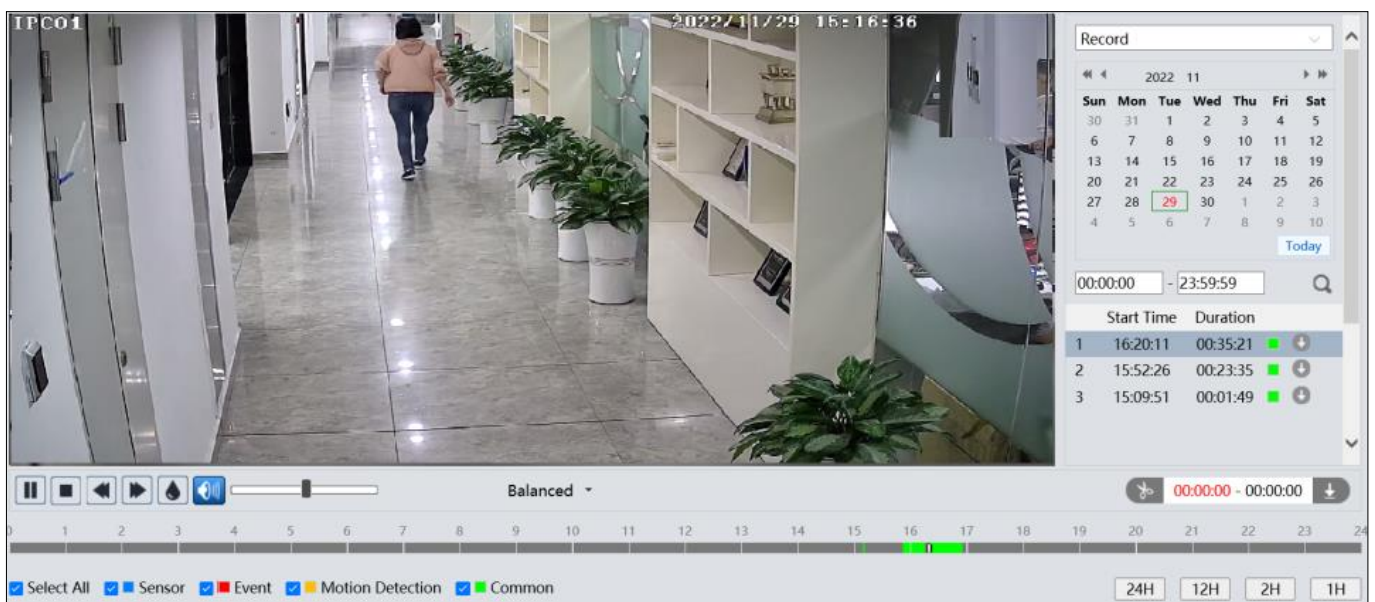- 1) Choose "Record".
- 2) Set search time: Select the date and choose the start and end time.
- 3) Click  to search the images.



- 4) Select the alarm events at the bottom of the interface.
- 5) Double click on a file name in the list to start playback.



Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		





**Note:**

- 1) 1.  and  cannot be displayed in the above interface via the plug-in free browser.

- 2) 2. For plug-in free playback, playback mode switch (balanced/real-time/fluent mode) and downloading functions are not supported too.
- 3) 3. For the fluent playback, it is recommended to use the plug-in required browser to play the recorded video with 2MP or above resolution.

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

- 1) Search the video files according to the above mentioned steps.
- 2) Select the start time by clicking on the time table.
- 3) Click  to set the start time and then this button turns blue ().
- 4) Select the end time by clicking on the time table. Then click  to set the end time.
- 5) Click  to download the video file in the PC.

Index	Process	Record T ype	Start Time	End Time	Path	Operate
1	94%	Motion D etection	2022-10-13 11:00:31	2022-10-13 11:00:48	<a href="#">Record</a>	<input type="button" value="Cancel"/>

Setting C:\Program Files\NetIPCamera\Record

- Click "Setting" to set the storage directory of the video files.
- Click "Open" to play the video.
- Click "Clear List" to clear the downloading list.
- Click "Close" to close the downloading window.

## 5. Appendix

### 5.1. Appendix 1 Troubleshooting

- **How to find the password?**

- A. The password for **admin** can be reset through "Edit Safety Question" function. Click "Forget Password" in the login window and then enter the corresponding answer of the selected question in the popup window. After you correctly answer all questions, you can reset the password for **admin**. If you forget the answer of the question, this way will be invalid, please contact your dealer for help.
- B. The passwords of other users can be reset by **admin**.

- **Fail to connect cameras via a web browser.**

- A. Network is not well connected. Check the connection and make sure it is connected well.
- B. IP address is not available. Reset the IP address.
- C. Web port number has been changed: contact administrator to get the correct port number.
- D. Exclude the above reasons. Restore to default setting by IP-Tool.

- **IP tool cannot search cameras.**


It may be caused by the anti-virus software in your computer. Please exit it and try to search camera again.

- **No sound can be heard.**


- Audio input camera is not connected. Please connect and try again.
- Audio function is not enabled at the corresponding channel. Please enable this function.

- **How to modify IP address through IP-Tool?**

After you install the IP-Tool, run it as shown below.

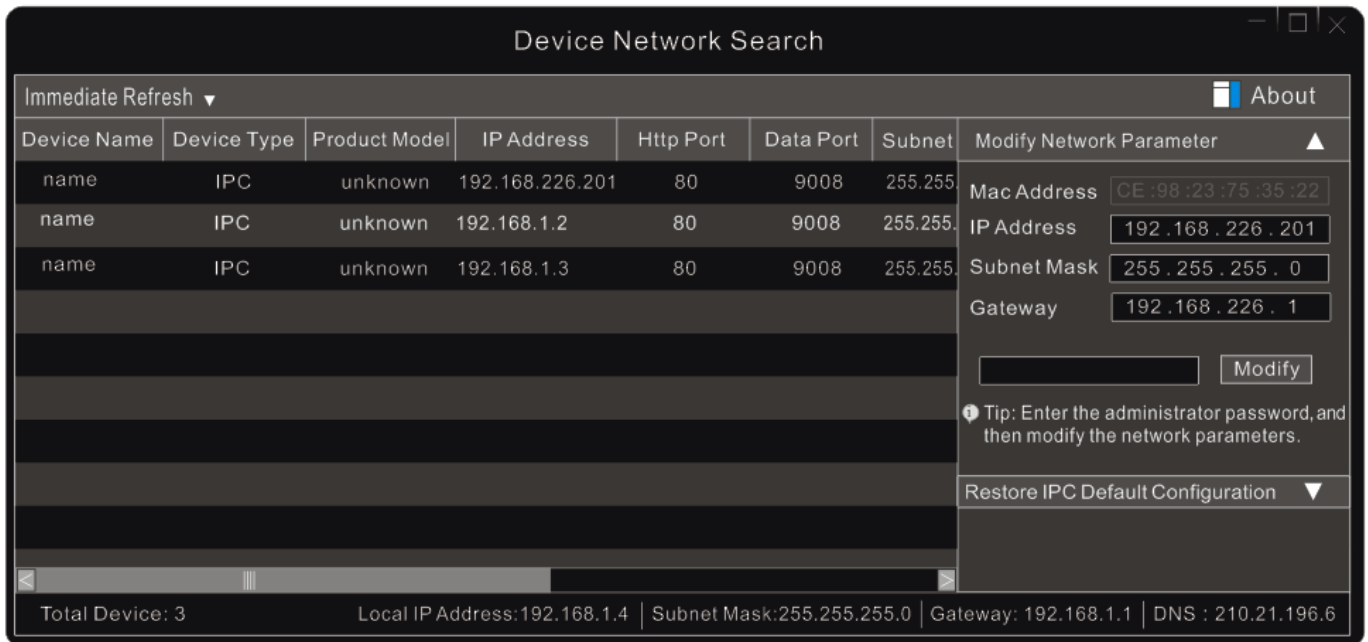


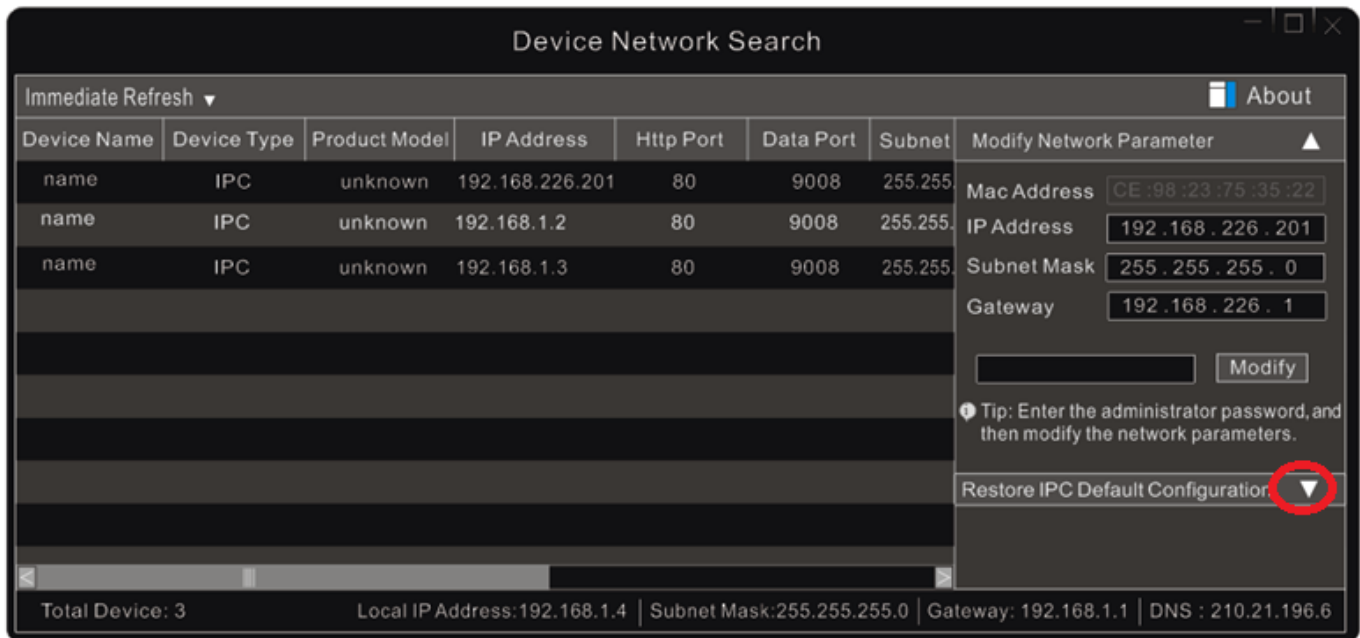
The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your camera according to the practical situation.

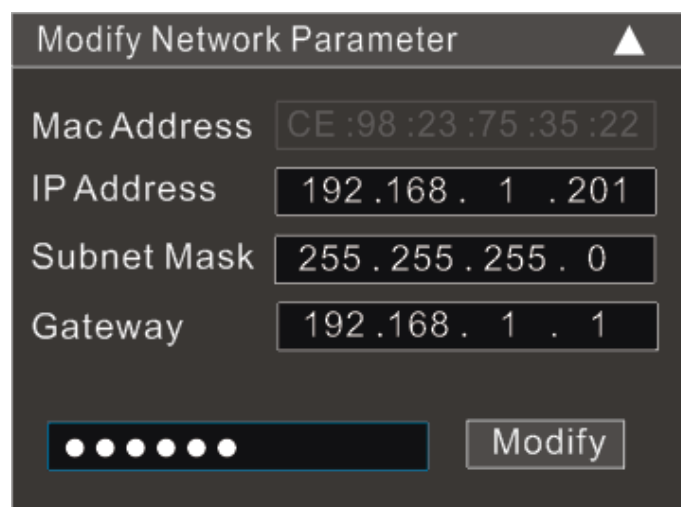

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of "admin" which is set in the camera activation interface in advance and then click the "Modify" button to change the network parameters.

- **How to restore to factory default setting through IP-Tool?**

Drag the slider at the bottom of the camera list to the right and then the MAC address of the searched cameras will be viewed. Find the MAC address of the IPC you want to restore to the factory default setting, click  next to "Restore IPC Default Configuration" to expand the menu, then enter the MAC address and click "OK". After that, manually reboot your camera within 30s. Then the camera will successfully restore to the factory default setting



## 6. General Warranty Conditions

Pumatronix ensures the product against any defect in material or manufacturing process for a period of 1 year from the date of issue of the invoice, provided that, at the discretion of its authorized technicians, it is found to be defective under normal conditions of use.

The replacement of defective parts and the execution of services resulting from this Warranty will only be carried out at Pumatronix Authorized Technical Assistance or a third party expressly indicated by Pumatronix, where the product must be delivered for repair.

This Warranty will only be valid if the product is accompanied by a *Maintenance Form* that has been duly completed and has not been erased and is accompanied by an Invoice.

### 6.1. Situations in which the Product loses its Warranty

- 1) Use of software/hardware not compatible with the specifications in the Manual;
- 2) Connecting the product to the mains outside the standards set out in the product manual and installations with excessive voltage variation;
- 3) Infiltration of liquids from opening/closing the product;
- 4) Damage caused by natural agents (electric shock, flooding, salt spray, excessive exposure to climatic variations, among other factors) or excessive exposure to heat (beyond the limits established in the Manual);
- 5) Use the product in environments subject to corrosive gases, excessive humidity and/or dust;
- 6) Show signs of tampering with security seals;

- 7) Show signs of opening and modification by the Customer in places of the product not authorized by Pumatronix;
- 8) Damage caused by accidents/falls/vandalism;
- 9) Display tampered and/or removed serial number;
- 10) Damage resulting from the Customer's transportation and packaging of the product in conditions incompatible with it;
- 11) Misuse and not in accordance with the Instruction Manual.

## 7. Privacy Policy

In compliance with the General Data Protection Law (LGPD) - Law No. 13709, dated August 14, 2018, this product has programmable functions for capturing and processing images that may infringe the LGPD when used in conjunction with other equipment to capture personal data.

The equipment does not collect, use or store personal information, whether sensitive or not, for its operation.

Pumatronix is not responsible for the purposes, use and handling of the images captured, and control of the information and ways of operating the product are the sole decision of the user or purchaser of the product.





[www.pumatronix.com](http://www.pumatronix.com)

